

PolyDyne PN

Fujifilm Sericol Formulation Guide

Version 2.0

- SMS Base Colors



SERICOL
More than ink...Solutions.

FUJIFILM

PolyDyne PN

Fujifilm Sericol Formulation Guide

This booklet furnishes the necessary formulas to simulate all the colors in the PANTONE® Color Guide. Predictive simulations were performed via a spectrophotometer simulating Cool White Florescent (CWF) lighting, ink deposit of 380 PW on white substrate.

All formulas are presented by weight. However, due to variations in ink film thickness, screen mesh, and other variables, some formulas may need adjustments.

Each IMS Base Color has been carefully selected for its cleanliness of tone, resistance to fading, and suitability for intermixing. In addition, each ink has been formulated to be free of lead and other heavy metals.

Although every care is taken in producing these formulations, variations in substrates and printing conditions may affect the color achieved. Fujifilm Sericol USA Inc. assumes no responsibility for actual color achieved versus the Pantone standard print. For this reason, all formulations must be proofed prior to a production run to ensure color accuracy.

All formulations are percentages by weight using the following PolyDyne PN Series IMS colors:

DESCRIPTION	
PN-064 IMS Yellow GS	PN-230 IMS Blue GS
PN-066 IMS Yellow RS	PN-233 IMS Blue RS
PN-114 IMS Orange	PN-325 IMS Green
PN-121 IMS Red YS	PN-SW Shading Black
PN-127 IMS Violet	PN-TW Tinting White
PN-164 IMS Red BS	PN-MX Mixing Clear
PN-165 IMS Magenta	

Fujifilm Sericol USA Inc's color mixing ink formulations for screen process printing produce only simulations of PANTONE Colors in this color reproduction method due to differences in ink film, opacity and pigment selection. The selection used in blending inks may cause metamerism. Pantone, Inc. assumes no responsibility for formula accuracy.

*PANTONE® is the property of Pantone Inc.

PolyDyne PN

Starting Point Yellow C PN-064 94.90 PN-TW 5.10	Formula	Starting Point Yellow 012 C PN-064 84.98 PN-TW 10.39 PN-066 4.63	Formula	Starting Point Orange 021 C PN-064 52.00 PN-114 48.00	Formula	Starting Point Warm Red C PN-114 51.51 PN-TW 32.54 PN-121 15.95	Formula
Starting Point Red 032 C PN-121 62.95 PN-TW 35.70 PN-164 1.35	Formula	Starting Point Rubine Red C PN-165 87.00 PN-121 13.00	Formula	Starting Point Rhodamine Red C PN-165 76.47 PN-TW 23.53	Formula	Starting Point Purple C PN-TW 44.57 PN-165 34.45 PN-MX 15.00 PN-127 5.98	Formula
Starting Point Violet C PN-TW 71.49 PN-127 28.51	Formula	Starting Point Blue 072 C PN-230 72.40 PN-127 14.56 PN-TW 13.04	Formula	Starting Point Reflex Blue C PN-TW 43.58 PN-230 34.48 PN-127 21.94	Formula	Starting Point Process Blue C PN-TW 53.54 PN-230 46.46	Formula
Starting Point Green C PN-325 56.00 PN-TW 44.00	Formula	Starting Point Black C PN-SB 59.46 PN-064 16.06 PN-TW 13.08 PN-114 11.40	Formula	Starting Point Process Yellow C PN-064 100.00	Formula	Starting Point Process Magenta C PN-165 90.52 PN-121 9.48	Formula

PolyDyne PN

Starting Point Process Cyan C PN-TW 76.98 PN-230 23.02	Formula	Starting Point Process Black C PN-SB 92.11 PN-121 7.89	Formula	Starting Point 100 C PN-TW 74.57 PN-064 25.43	Formula	Starting Point 101 C PN-TW 55.59 PN-064 43.88 PN-325 0.53	Formula
Starting Point 102 C PN-064 100.00	Formula	Starting Point 103 C PN-064 94.82 PN-121 2.85 PN-325 2.33	Formula	Starting Point 104 C PN-064 90.06 PN-325 4.16 PN-164 3.35 PN-114 2.43	Formula	Starting Point 105 C PN-064 69.92 PN-SB 17.14 PN-TW 12.94	Formula
Starting Point 106 C PN-TW 58.79 PN-064 41.21	Formula	Starting Point 107 C PN-064 60.56 PN-TW 39.44	Formula	Starting Point 108 C PN-064 86.69 PN-TW 13.31	Formula	Starting Point 109 C PN-064 90.54 PN-TW 9.46	Formula
Starting Point 110 C PN-064 94.93 PN-121 3.52 PN-325 1.55	Formula	Starting Point 111 C PN-064 87.20 PN-114 9.58 PN-230 3.22	Formula	Starting Point 112 C PN-064 87.13 PN-SB 12.87	Formula	Starting Point 113 C PN-TW 60.74 PN-064 39.26	Formula

PolyDyne PN

Starting Point	Formula
114 C	
PN-TW 54.48	
PN-064 45.52	

Starting Point	Formula
115 C	
PN-064 52.74	
PN-TW 47.26	

Starting Point	Formula
116 C	
PN-064 84.00	
PN-TW 16.00	

Starting Point	Formula
117 C	
PN-064 91.97	
PN-121 5.61	
PN-325 2.42	

Starting Point	Formula
118 C	
PN-064 85.82	
PN-114 11.16	
PN-230 3.02	

Starting Point	Formula
119 C	
PN-064 84.00	
PN-SB 16.00	

Starting Point	Formula
120 C	
PN-TW 73.00	
PN-064 27.00	

Starting Point	Formula
121 C	
PN-TW 68.00	
PN-064 32.00	

Starting Point	Formula
122 C	
PN-TW 54.80	
PN-064 44.50	
PN-121 0.70	

Starting Point	Formula
123 C	
PN-064 63.50	
PN-TW 35.10	
PN-121 1.40	

Starting Point	Formula
124 C	
PN-064 86.60	
PN-TW 9.00	
PN-121 3.50	
PN-325 0.90	

Starting Point	Formula
125 C	
PN-064 86.40	
PN-165 5.30	
PN-114 5.00	
PN-325 3.30	

Starting Point	Formula
126 C	
PN-064 84.00	
PN-165 7.00	
PN-325 5.00	
PN-121 4.00	

Starting Point	Formula
1205 C	
PN-TW 94.03	
PN-066 5.97	

Starting Point	Formula
1215 C	
PN-TW 84.25	
PN-064 15.00	
PN-114 0.75	

Starting Point	Formula
1225 C	
PN-TW 50.30	
PN-064 47.20	
PN-114 2.50	

PolyDyne PN

Starting Point	Formula
1235 C	
PN-064 69.00	
PN-TW 25.59	
PN-114 5.41	

Starting Point	Formula
1245 C	
PN-066 95.50	
PN-325 2.60	
PN-164 1.90	

Starting Point	Formula
1255 C	
PN-066 86.30	
PN-165 9.80	
PN-325 3.90	

Starting Point	Formula
1265 C	
PN-064 64.42	
PN-SB 17.87	
PN-TW 13.02	
PN-114 4.69	

Starting Point	Formula
127 C	
PN-TW 77.50	
PN-064 22.50	

Starting Point	Formula
128 C	
PN-TW 62.00	
PN-064 38.00	

Starting Point	Formula
129 C	
PN-064 53.40	
PN-TW 46.60	

Starting Point	Formula
130 C	
PN-064 96.00	
PN-165 4.00	

Starting Point	Formula
131 C	
PN-064 93.00	
PN-164 5.75	
PN-325 1.25	

Starting Point	Formula
132 C	
PN-064 87.70	
PN-SB 9.00	
PN-164 3.30	

Starting Point	Formula
133 C	
PN-064 65.60	
PN-164 15.00	
PN-325 12.50	
PN-114 6.90	

Starting Point	Formula
134 C	
PN-TW 77.00	
PN-064 22.00	
PN-121 1.00	

Starting Point	Formula
135 C	
PN-TW 56.40	
PN-064 41.70	
PN-121 1.90	

Starting Point	Formula
136 C	
PN-064 53.60	
PN-TW 42.00	
PN-114 4.40	

Starting Point	Formula
137 C	
PN-066 99.00	
PN-114 1.00	

Starting Point	Formula
138 C	
PN-064 80.40	
PN-114 18.75	
PN-230 0.85	

PolyDyne PN

Starting Point	Formula
139 C	
PN-064	78.00
PN-114	13.70
PN-164	4.75
PN-325	3.55

Starting Point	Formula
140 C	
PN-064	70.00
PN-SB	22.00
PN-114	8.00

Starting Point	Formula
1345 C	
PN-TW	75.45
PN-066	23.80
PN-114	0.75

Starting Point	Formula
1355 C	
PN-TW	69.43
PN-066	30.57

Starting Point	Formula
1365 C	
PN-066	52.20
PN-TW	47.80

Starting Point	Formula
1375 C	
PN-066	78.90
PN-TW	16.43
PN-114	4.67

Starting Point	Formula
1385 C	
PN-066	78.00
PN-114	19.60
PN-325	2.40

Starting Point	Formula
1395 C	
PN-066	71.90
PN-114	23.60
PN-230	4.50

Starting Point	Formula
1405 C	
PN-066	68.51
PN-SB	26.97
PN-114	4.52

Starting Point	Formula
141 C	
PN-TW	56.88
PN-066	43.12

Starting Point	Formula
142 C	
PN-066	67.00
PN-TW	33.00

Starting Point	Formula
143 C	
PN-066	86.60
PN-TW	13.40

Starting Point	Formula
144 C	
PN-066	89.24
PN-114	8.93
PN-SB	1.83

Starting Point	Formula
145 C	
PN-066	86.90
PN-114	8.38
PN-SB	4.72

Starting Point	Formula
146 C	
PN-066	80.40
PN-SB	11.38
PN-114	8.22

Starting Point	Formula
147 C	
PN-066	74.07
PN-SB	12.18
PN-164	7.33
PN-325	6.42

PolyDyne PN

Starting Point 148 C PN-TW 83.00 PN-066 17.00	Formula	Starting Point 149 C PN-TW 75.50 PN-066 23.20 PN-121 1.30	Formula	Starting Point 150 C PN-TW 47.89 PN-066 47.70 PN-114 4.41	Formula	Starting Point 151 C PN-066 78.34 PN-114 21.66	Formula
Starting Point 152 C PN-066 76.60 PN-114 22.60 PN-230 0.80	Formula	Starting Point 153 C PN-066 73.33 PN-114 24.26 PN-230 2.41	Formula	Starting Point 154 C PN-066 61.82 PN-114 24.87 PN-325 6.91 PN-164 6.40	Formula	Starting Point 1485 C PN-TW 79.38 PN-064 12.21 PN-114 8.41	Formula
Starting Point 1495 C PN-066 52.77 PN-TW 35.08 PN-114 12.15	Formula	Starting Point 1505 C PN-064 68.59 PN-114 31.41	Formula	Starting Point 1525 C PN-114 63.29 PN-066 34.47 PN-325 2.24	Formula	Starting Point 1535 C PN-114 91.80 PN-325 8.20	Formula
Starting Point 1545 C PN-064 38.90 PN-SB 37.77 PN-114 23.33	Formula	Starting Point 155 C PN-TW 88.52 PN-064 10.08 PN-165 1.40	Formula	Starting Point 156 C PN-TW 74.13 PN-064 22.59 PN-165 3.28	Formula	Starting Point 157 C PN-064 55.15 PN-TW 37.58 PN-165 7.27	Formula

PolyDyne PN

Starting Point 158 C PN-064 87.91 PN-164 12.09	Formula	Starting Point 159 C PN-064 82.27 PN-164 16.76 PN-325 0.97	Formula	Starting Point 160 C PN-064 76.19 PN-164 15.62 PN-SB 8.19	Formula	Starting Point 161 C PN-064 51.14 PN-SB 34.16 PN-121 14.70	Formula
Starting Point 1555 C PN-TW 90.70 PN-114 5.00 PN-066 3.80 PN-165 0.50	Formula	Starting Point 1565 C PN-TW 78.80 PN-066 11.50 PN-114 8.80 PN-165 0.90	Formula	Starting Point 1575 C PN-TW 43.20 PN-066 37.90 PN-114 17.45 PN-121 1.45	Formula	Starting Point 1585 C PN-TW 17.15 PN-064 46.56 PN-114 35.35 PN-165 0.94	Formula
Starting Point 1595 C PN-114 42.55 PN-064 42.10 PN-TW 12.05 PN-SB 3.30	Formula	Starting Point 1605 C PN-066 48.05 PN-114 34.38 PN-SB 11.47 PN-TW 6.10	Formula	Starting Point 1615 C PN-114 49.06 PN-064 32.21 PN-SB 18.73	Formula	Starting Point 162 C PN-TW 88.14 PN-066 8.48 PN-121 3.38	Formula
Starting Point 163 C PN-TW 78.91 PN-114 16.58 PN-064 4.51	Formula	Starting Point 164 C PN-TW 50.14 PN-114 32.05 PN-064 17.81	Formula	Starting Point 165 C PN-114 44.16 PN-066 40.98 PN-TW 14.86	Formula	Starting Point 166 C PN-114 58.70 PN-064 29.85 PN-TW 9.25 PN-SB 2.20	Formula

PolyDyne PN

Starting Point	Formula
167 C	
PN-114	50.26
PN-064	32.32
PN-TW	11.29
PN-SB	6.13

Starting Point	Formula
168 C	
PN-114	33.68
PN-064	30.28
PN-SB	26.89
PN-TW	9.15

Starting Point	Formula
1625 C	
PN-TW	87.70
PN-114	8.87
PN-121	3.43

Starting Point	Formula
1635 C	
PN-TW	80.32
PN-114	16.36
PN-121	3.32

Starting Point	Formula
1645 C	
PN-114	50.78
PN-TW	49.22

Starting Point	Formula
1655 C	
PN-114	72.56
PN-066	18.83
PN-TW	8.61

Starting Point	Formula
1665 C	
PN-114	87.81
PN-TW	11.18
PN-325	1.01

Starting Point	Formula
1675 C	
PN-064	55.43
PN-121	39.99
PN-325	4.58

Starting Point	Formula
1685 C	
PN-114	54.85
PN-066	25.73
PN-SB	19.42

Starting Point	Formula
169 C	
PN-TW	94.70
PN-121	4.18
PN-114	1.12

Starting Point	Formula
170 C	
PN-TW	80.58
PN-114	10.23
PN-121	9.19

Starting Point	Formula
171 C	
PN-TW	47.18
PN-114	43.51
PN-121	9.31

Starting Point	Formula
172 C	
PN-114	80.27
PN-TW	18.41
PN-165	1.32

Starting Point	Formula
173 C	
PN-114	74.70
PN-TW	19.95
PN-121	4.27
PN-230	1.08

Starting Point	Formula
174 C	
PN-114	77.04
PN-SB	13.54
PN-TW	9.42

Starting Point	Formula
175 C	
PN-114	76.61
PN-TW	12.27
PN-230	11.12

PolyDyne PN

Starting Point	Formula
176 C	
PN-TW	92.28
PN-121	5.45
PN-165	2.27

Starting Point	Formula
177 C	
PN-TW	83.32
PN-121	16.68

Starting Point	Formula
178 C	
PN-TW	59.30
PN-121	40.70

Starting Point	Formula
179 C	
PN-114	57.05
PN-TW	25.86
PN-121	16.49
PN-230	0.60

Starting Point	Formula
180 C	
PN-114	48.27
PN-TW	25.07
PN-121	24.90
PN-230	1.76

Starting Point	Formula
181 C	
PN-114	57.18
PN-SB	21.50
PN-TW	16.38
PN-064	4.94

Starting Point	Formula
1765 C	
PN-TW	90.29
PN-121	6.11
PN-165	3.60

Starting Point	Formula
1775 C	
PN-TW	79.94
PN-165	11.75
PN-114	8.31

Starting Point	Formula
1785 C	
PN-TW	54.27
PN-121	45.73

Starting Point	Formula
1788 C	
PN-121	52.06
PN-TW	28.35
PN-114	19.59

Starting Point	Formula
1795 C	
PN-121	46.33
PN-114	30.16
PN-TW	21.46
PN-SB	2.05

Starting Point	Formula
1805 C	
PN-121	42.27
PN-114	34.79
PN-TW	16.08
PN-SB	6.86

Starting Point	Formula
1815 C	
PN-121	61.03
PN-114	32.35
PN-230	6.62

Starting Point	Formula
1767 C	
PN-TW	93.78
PN-121	3.24
PN-165	2.98

Starting Point	Formula
1777 C	
PN-TW	71.29
PN-121	16.72
PN-165	11.99

Starting Point	Formula
1787 C	
PN-TW	46.78
PN-121	34.89
PN-165	18.33

PolyDyne PN

Starting Point	Formula
1797 C	
PN-165	44.13
PN-114	39.39
PN-TW	15.28
PN-SB	1.20

Starting Point	Formula
1807 C	
PN-165	45.98
PN-114	35.67
PN-TW	11.62
PN-SB	6.73

Starting Point	Formula
1817 C	
PN-121	53.14
PN-SB	30.21
PN-TW	15.09
PN-114	1.56

Starting Point	Formula
182 C	
PN-TW	95.35
PN-165	2.62
PN-121	2.03

Starting Point	Formula
183 C	
PN-TW	87.08
PN-165	6.45
PN-121	6.47

Starting Point	Formula
184 C	
PN-TW	67.90
PN-121	18.27
PN-165	13.83

Starting Point	Formula
185 C	
PN-121	63.85
PN-TW	24.61
PN-165	11.54

Starting Point	Formula
186 C	
PN-121	65.58
PN-TW	21.34
PN-165	12.52
PN-230	0.56

Starting Point	Formula
187 C	
PN-121	59.28
PN-165	20.39
PN-TW	17.90
PN-325	2.43

Starting Point	Formula
188 C	
PN-121	72.60
PN-TW	12.00
PN-164	9.22
PN-230	6.18

Starting Point	Formula
189 C	
PN-TW	90.60
PN-165	6.02
PN-121	3.38

Starting Point	Formula
190 C	
PN-TW	76.69
PN-165	14.09
PN-121	9.22

Starting Point	Formula
191 C	
PN-TW	48.35
PN-165	29.61
PN-121	22.04

Starting Point	Formula
192 C	
PN-165	55.73
PN-121	44.27

Starting Point	Formula
193 C	
PN-121	49.58
PN-165	29.82
PN-TW	20.60

Starting Point	Formula
194 C	
PN-121	45.63
PN-165	23.62
PN-TW	22.03
PN-SB	8.72

PolyDyne PN

Starting Point 195 C PN-121 61.67 PN-TW 20.10 PN-165 11.59 PN-230 6.64	Formula	Starting Point 1895 C PN-TW 94.58 PN-165 4.80 PN-114 0.62	Formula	Starting Point 1905 C PN-TW 86.76 PN-165 7.98 PN-121 5.26	Formula	Starting Point 1915 C PN-TW 57.78 PN-165 30.18 PN-121 12.04	Formula
Starting Point 1925 C PN-165 35.68 PN-121 33.51 PN-TW 30.81	Formula	Starting Point 1935 C PN-165 44.73 PN-121 37.08 PN-TW 18.19 PN-230	Formula	Starting Point 1945 C PN-165 46.76 PN-121 41.21 PN-TW 10.30 PN-230 1.73	Formula	Starting Point 1955 C PN-121 35.13 PN-165 34.88 PN-TW 20.98 PN-SB 9.01	Formula
Starting Point 196 C PN-TW 97.38 PN-164 2.62	Formula	Starting Point 197 C PN-TW 91.48 PN-164 8.52	Formula	Starting Point 198 C PN-TW 60.71 PN-121 13.58 PN-164 13.05 PN-165 12.66	Formula	Starting Point 199 C PN-121 43.14 PN-165 42.51 PN-TW 14.35	Formula
Starting Point 200 C PN-121 41.40 PN-164 37.66 PN-TW 18.78 PN-SB 2.16	Formula	Starting Point 201 C PN-164 47.83 PN-066 34.28 PN-TW 11.49 PN-SB 6.40	Formula	Starting Point 202 C PN-164 48.79 PN-066 46.93 PN-230 4.28	Formula	Starting Point 203 C PN-TW 93.75 PN-165 3.39 PN-164 2.86	Formula

PolyDyne PN

Starting Point	Formula
204 C	
PN-TW 82.44	
PN-165 11.00	
PN-164 6.56	

Starting Point	Formula
205 C	
PN-TW 52.80	
PN-165 38.91	
PN-121 8.29	

Starting Point	Formula
206 C	
PN-165 64.12	
PN-066 22.13	
PN-121 13.75	

Starting Point	Formula
207 C	
PN-165 61.53	
PN-121 26.95	
PN-TW 7.81	
PN-SB 3.71	

Starting Point	Formula
208 C	
PN-165 61.27	
PN-114 15.87	
PN-TW 13.08	
PN-SB 9.78	

Starting Point	Formula
209 C	
PN-165 46.21	
PN-066 35.33	
PN-SB 18.46	

Starting Point	Formula
210 C	
PN-TW 89.41	
PN-165 9.01	
PN-121 1.58	

Starting Point	Formula
211 C	
PN-TW 78.72	
PN-165 21.28	

Starting Point	Formula
212 C	
PN-TW 42.26	
PN-165 57.74	

Starting Point	Formula
213 C	
PN-165 88.36	
PN-121 11.64	

Starting Point	Formula
214 C	
PN-165 70.93	
PN-066 29.07	

Starting Point	Formula
215 C	
PN-165 77.17	
PN-114 20.72	
PN-230 2.11	

Starting Point	Formula
216 C	
PN-121 46.80	
PN-165 36.16	
PN-TW 10.62	
PN-230 6.42	

Starting Point	Formula
217 C	
PN-TW 94.69	
PN-165 5.31	

Starting Point	Formula
218 C	
PN-TW 75.36	
PN-165 24.13	
PN-164 0.51	

Starting Point	Formula
219 C	
PN-165 87.94	
PN-121 12.06	

PolyDyne PN

Starting Point	Formula
220 C	
PN-165 87.49	
PN-121 11.29	
PN-230 1.22	

Starting Point	Formula
221 C	
PN-165 77.56	
PN-121 14.32	
PN-SB 8.12	

Starting Point	Formula
222 C	
PN-165 56.73	
PN-SB 28.84	
PN-121 14.43	

Starting Point	Formula
223 C	
PN-165 53.86	
PN-121 38.41	
PN-230 7.73	

Starting Point	Formula
224 C	
PN-TW 71.15	
PN-165 28.85	

Starting Point	Formula
225 C	
PN-165 80.00	
PN-MX 20.00	

Starting Point	Formula
226 C	
PN-165 100.00	

Starting Point	Formula
227 C	
PN-165 89.00	
PN-121 7.45	
PN-SB 3.55	

Starting Point	Formula
228 C	
PN-165 74.40	
PN-164 13.48	
PN-SB 12.12	

Starting Point	Formula
229 C	
PN-165 57.53	
PN-121 31.95	
PN-230 10.52	

Starting Point	Formula
230 C	
PN-TW 89.92	
PN-165 10.08	

Starting Point	Formula
231 C	
PN-TW 77.42	
PN-165 22.58	

Starting Point	Formula
232 C	
PN-TW 57.04	
PN-165 42.96	

Starting Point	Formula
233 C	
PN-165 99.26	
PN-127 0.74	

Starting Point	Formula
234 C	
PN-165 81.35	
PN-TW 13.81	
PN-SB 4.84	

Starting Point	Formula
235 C	
PN-165 77.95	
PN-TW 10.00	
PN-SB 9.37	
PN-114 2.68	

PolyDyne PN

Starting Point	Formula
236 C	
PN-TW 92.49	
PN-165 7.51	

Starting Point	Formula
237 C	
PN-TW 83.69	
PN-165 16.31	

Starting Point	Formula
238 C	
PN-TW 66.24	
PN-165 33.76	

Starting Point	Formula
239 C	
PN-TW 55.22	
PN-165 44.78	

Starting Point	Formula
240 C	
PN-165 98.80	
PN-230 1.20	

Starting Point	Formula
241 C	
PN-165 98.29	
PN-230 1.71	

Starting Point	Formula
242 C	
PN-165 75.48	
PN-121 16.34	
PN-325 8.18	

Starting Point	Formula
2365 C	
PN-TW 96.35	
PN-165 3.65	

Starting Point	Formula
2375 C	
PN-TW 75.39	
PN-165 24.61	

Starting Point	Formula
2385 C	
PN-TW 50.99	
PN-165 48.19	
PN-127 0.82	

Starting Point	Formula
2395 C	
PN-165 98.25	
PN-127 1.75	

Starting Point	Formula
2405 C	
PN-165 95.96	
PN-127 4.04	

Starting Point	Formula
2415 C	
PN-165 95.82	
PN-SB 2.20	
PN-230 1.98	

Starting Point	Formula
2425 C	
PN-165 85.88	
PN-SB 12.31	
PN-127 1.81	

Starting Point	Formula
243 C	
PN-TW 95.05	
PN-165 4.41	
PN-127 0.54	

Starting Point	Formula
244 C	
PN-TW 90.88	
PN-165 8.31	
PN-127 0.81	

PolyDyne PN

Starting Point	Formula
245 C	
PN-TW	80.86
PN-165	17.93
PN-127	1.21

Starting Point	Formula
246 C	
PN-165	98.73
PN-230	1.27

Starting Point	Formula
247 C	
PN-165	95.90
PN-127	4.10

Starting Point	Formula
248 C	
PN-165	97.23
PN-230	2.77

Starting Point	Formula
249 C	
PN-165	85.11
PN-114	8.67
PN-230	6.22

Starting Point	Formula
250 C	
PN-TW	97.04
PN-165	1.90
PN-127	1.06

Starting Point	Formula
251 C	
PN-TW	89.44
PN-165	8.89
PN-127	1.67

Starting Point	Formula
252 C	
PN-TW	70.32
PN-165	26.74
PN-127	2.94

Starting Point	Formula
253 C	
PN-165	96.95
PN-230	3.05

Starting Point	Formula
254 C	
PN-165	95.79
PN-230	4.21

Starting Point	Formula
255 C	
PN-165	59.18
PN-TW	24.60
PN-127	8.17
PN-SB	8.05

Starting Point	Formula
256 C	
PN-TW	98.25
PN-127	0.95
PN-165	0.80

Starting Point	Formula
257 C	
PN-TW	96.43
PN-127	2.00
PN-164	1.57

Starting Point	Formula
258 C	
PN-TW	61.15
PN-165	30.90
PN-127	7.03
PN-SB	0.92

Starting Point	Formula
259 C	
PN-165	82.47
PN-TW	8.86
PN-230	6.93
PN-114	1.74

Starting Point	Formula
260 C	
PN-165	77.91
PN-230	8.47
PN-114	7.25
PN-TW	6.37

PolyDyne PN

Starting Point	Formula
261 C	
PN-165	77.24
PN-325	14.12
PN-114	8.64

Starting Point	Formula
262 C	
PN-165	59.82
PN-SB	27.93
PN-TW	8.80
PN-325	3.45

Starting Point	Formula
2562 C	
PN-TW	94.79
PN-165	3.19
PN-127	2.02

Starting Point	Formula
2572 C	
PN-TW	87.70
PN-165	8.55
PN-127	3.75

Starting Point	Formula
2582 C	
PN-TW	68.44
PN-165	23.99
PN-127	7.57

Starting Point	Formula
2592 C	
PN-TW	55.42
PN-165	34.98
PN-127	9.60

Starting Point	Formula
2602 C	
PN-TW	48.33
PN-165	41.20
PN-127	10.47

Starting Point	Formula
2612 C	
PN-165	90.63
PN-127	9.37

Starting Point	Formula
2622 C	
PN-165	56.43
PN-TW	18.11
PN-SB	16.98
PN-127	8.48

Starting Point	Formula
2563 C	
PN-TW	95.22
PN-165	2.62
PN-127	2.16

Starting Point	Formula
2573 C	
PN-TW	88.20
PN-165	7.99
PN-127	3.81

Starting Point	Formula
2583 C	
PN-TW	70.80
PN-165	21.24
PN-127	7.96

Starting Point	Formula
2593 C	
PN-TW	51.85
PN-165	37.41
PN-127	10.74

Starting Point	Formula
2603 C	
PN-165	89.77
PN-127	10.23

Starting Point	Formula
2613 C	
PN-165	58.94
PN-TW	25.00
PN-127	13.32
PN-SB	2.74

Starting Point	Formula
2623 C	
PN-165	64.30
PN-127	16.56
PN-TW	12.14
PN-SB	7.00

PolyDyne PN

Starting Point 2567 C PN-TW 95.71 PN-127 3.54 PN-165 0.75	Formula	Starting Point 2577 C PN-TW 90.64 PN-127 5.79 PN-165 3.57	Formula	Starting Point 2587 C PN-TW 81.35 PN-127 18.65	Formula	Starting Point 2597 C PN-165 87.55 PN-230 12.45	Formula
Starting Point 2607 C PN-165 75.00 PN-127 25.00	Formula	Starting Point 2617 C PN-165 80.00 PN-127 14.00 PN-230 6.00	Formula	Starting Point 2627 C PN-165 52.40 PN-TW 19.59 PN-127 19.25 PN-SB 8.76	Formula	Starting Point 263 C PN-TW 99.00 PN-127 1.00	Formula
Starting Point 264 C PN-TW 97.00 PN-127 2.60 PN-230 0.40	Formula	Starting Point 265 C PN-TW 88.40 PN-127 11.60	Formula	Starting Point 266 C PN-TW 77.00 PN-127 23.00	Formula	Starting Point 267 C PN-TW 65.00 PN-127 35.00	Formula
Starting Point 268 C PN-165 85.90 PN-230 14.10	Formula	Starting Point 269 C PN-165 70.13 PN-230 15.18 PN-SB 12.90 PN-TW 1.79	Formula	Starting Point 2635 C PN-TW 96.87 PN-127 2.68 PN-230 0.45	Formula	Starting Point 2645 C PN-TW 95.50 PN-127 3.95 PN-230 0.55	Formula

PolyDyne PN

Starting Point 2655 C PN-TW 90.50 PN-127 9.50	Formula	Starting Point 2665 C PN-TW 82.80 PN-127 17.20	Formula	Starting Point 2685 C PN-TW 61.80 PN-127 38.20	Formula	Starting Point 2695 C PN-127 54.86 PN-TW 28.87 PN-SB 8.58 PN-164 7.69	Formula
Starting Point 270 C PN-TW 91.80 PN-165 6.00 PN-230 2.20	Formula	Starting Point 271 C PN-TW 84.23 PN-165 11.62 PN-230 4.15	Formula	Starting Point 272 C PN-TW 79.23 PN-165 11.49 PN-230 5.60 PN-127 3.68	Formula	Starting Point 273 C PN-165 73.81 PN-230 17.20 PN-127 8.99	Formula
Starting Point 274 C PN-127 64.68 PN-165 33.11 PN-230 2.21	Formula	Starting Point 275 C PN-127 94.53 PN-230 5.47	Formula	Starting Point 276 C PN-127 71.39 PN-SB 28.61	Formula	Starting Point 2705 C PN-TW 95.57 PN-127 2.95 PN-230 1.48	Formula
Starting Point 2715 C PN-TW 91.84 PN-127 5.57 PN-230 2.59	Formula	Starting Point 2725 C PN-TW 82.00 PN-127 18.00	Formula	Starting Point 2735 C PN-230 73.21 PN-127 26.79	Formula	Starting Point 2745 C PN-230 65.00 PN-127 35.00	Formula

PolyDyne PN

Starting Point	Formula
2755 C	
PN-127 60.00	
PN-230 40.00	

Starting Point	Formula
2765 C	
PN-127 77.56	
PN-230 11.61	
PN-066 10.83	

Starting Point	Formula
2706 C	
PN-TW 98.50	
PN-127 0.77	
PN-230 0.73	

Starting Point	Formula
2716 C	
PN-TW 94.86	
PN-127 2.65	
PN-230 2.49	

Starting Point	Formula
2726 C	
PN-TW 74.00	
PN-127 13.70	
PN-230 12.30	

Starting Point	Formula
2736 C	
PN-TW 62.60	
PN-127 22.35	
PN-230 15.05	

Starting Point	Formula
2746 C	
PN-230 76.02	
PN-127 23.98	

Starting Point	Formula
2756 C	
PN-127 61.76	
PN-230 30.56	
PN-TW 7.68	

Starting Point	Formula
2766 C	
PN-127 58.96	
PN-230 25.95	
PN-SB 15.09	

Starting Point	Formula
2707 C	
PN-TW 97.91	
PN-230 1.29	
PN-127 0.80	

Starting Point	Formula
2717 C	
PN-TW 96.75	
PN-230 2.07	
PN-127 1.18	

Starting Point	Formula
2727 C	
PN-TW 78.13	
PN-230 16.23	
PN-127 5.64	

Starting Point	Formula
2747 C	
PN-230 91.50	
PN-127 8.50	

Starting Point	Formula
2757 C	
PN-127 54.16	
PN-230 35.90	
PN-TW 9.94	

Starting Point	Formula
2767 C	
PN-SB 40.48	
PN-230 24.30	
PN-127 18.54	
PN-TW 16.68	

Starting Point	Formula
2708 C	
PN-TW 97.62	
PN-230 1.42	
PN-127 0.96	

PolyDyne PN

Starting Point 2718 C PN-TW 84.85 PN-230 10.18 PN-127 4.97	Formula	Starting Point 2728 C PN-TW 60.41 PN-230 25.47 PN-127 14.12	Formula	Starting Point 2738 C PN-230 77.62 PN-127 22.38	Formula	Starting Point 2748 C PN-230 63.45 PN-127 36.55	Formula
Starting Point 2758 C PN-127 64.78 PN-230 23.31 PN-TW 11.91	Formula	Starting Point 2768 C PN-127 85.95 PN-SB 14.05	Formula	Starting Point 277 C PN-TW 96.87 PN-230 2.13 PN-127 1.00	Formula	Starting Point 278 C PN-TW 95.21 PN-230 3.44 PN-127 1.35	Formula
Starting Point 279 C PN-TW 84.24 PN-230 12.26 PN-127 3.50	Formula	Starting Point 280 C PN-230 79.62 PN-127 20.38	Formula	Starting Point 281 C PN-230 62.88 PN-127 37.12	Formula	Starting Point 282 C PN-230 60.68 PN-SB 28.63 PN-127 10.69	Formula
Starting Point 283 C PN-165 40.80 PN-SB 30.12 PN-230 26.89 PN-TW 2.19	Formula	Starting Point 284 C PN-TW 96.51 PN-230 2.62 PN-127 0.87	Formula	Starting Point 285 C PN-TW 93.41 PN-230 5.11 PN-127 1.48	Formula	Starting Point 286 C PN-TW 70.51 PN-230 25.47 PN-127 4.02	Formula

PolyDyne PN

Starting Point 287 C PN-230 89.27 PN-127 10.73	Formula	Starting Point 288 C PN-230 88.73 PN-127 11.27	Formula	Starting Point 289 C PN-230 81.28 PN-127 14.36 PN-SB 4.36	Formula	Starting Point 290 C PN-TW 98.68 PN-230 1.00 PN-127 0.32	Formula
Starting Point 291 C PN-TW 97.57 PN-230 1.91 PN-127 0.52	Formula	Starting Point 292 C PN-TW 93.63 PN-230 5.27 PN-127 1.10	Formula	Starting Point 293 C PN-TW 47.82 PN-230 43.49 PN-127 8.69	Formula	Starting Point 294 C PN-230 85.69 PN-127 8.57 PN-SB 5.74	Formula
Starting Point 295 C PN-230 73.63 PN-SB 16.80 PN-127 9.57	Formula	Starting Point 296 C PN-230 49.54 PN-SB 41.60 PN-127 8.86	Formula	Starting Point 2905 C PN-TW 96.81 PN-230 2.66 PN-127 0.53	Formula	Starting Point 2915 C PN-TW 93.60 PN-230 5.54 PN-127 0.86	Formula
Starting Point 2925 C PN-TW 80.50 PN-230 18.09 PN-127 1.41	Formula	Starting Point 2935 C PN-TW 47.59 PN-230 47.43 PN-127 4.98	Formula	Starting Point 2945 C PN-230 73.85 PN-TW 22.46 PN-127 3.69	Formula	Starting Point 2955 C PN-230 79.25 PN-SB 15.14 PN-127 5.61	Formula

PolyDyne PN

Starting Point 2965 C PN-230 64.35 PN-SB 30.10 PN-127 5.55	Formula	Starting Point 297 C PN-TW 95.46 PN-230 4.14 PN-127 0.40	Formula	Starting Point 298 C PN-TW 91.60 PN-230 7.84 PN-127 0.56	Formula	Starting Point 299 C PN-TW 82.12 PN-230 17.23 PN-127 0.65	Formula
Starting Point 300 C PN-230 55.02 PN-TW 43.17 PN-127 1.81	Formula	Starting Point 301 C PN-230 83.95 PN-TW 12.86 PN-SB 1.70 PN-127 1.49	Formula	Starting Point 302 C PN-230 68.88 PN-TW 15.09 PN-SB 14.20 PN-127 1.83	Formula	Starting Point 303 C PN-230 66.38 PN-SB 32.68 PN-127 0.94	Formula
Starting Point 2975 C PN-TW 98.02 PN-230 1.98	Formula	Starting Point 2985 C PN-TW 92.90 PN-230 7.10	Formula	Starting Point 2995 C PN-TW 79.50 PN-230 20.50	Formula	Starting Point 3005 C PN-230 60.00 PN-MX 40.00	Formula
Starting Point 3015 C PN-230 98.21 PN-SB 1.79	Formula	Starting Point 3025 C PN-230 68.87 PN-TW 17.47 PN-SB 13.66	Formula	Starting Point 3035 C PN-230 63.02 PN-SB 27.97 PN-TW 9.01	Formula	Starting Point 304 C PN-TW 97.58 PN-230 2.12 PN-325 0.30	Formula

PolyDyne PN

Starting Point	Formula
305 C	
PN-TW 94.56	
PN-230 5.44	

Starting Point	Formula
306 C	
PN-TW 87.29	
PN-230 12.71	

Starting Point	Formula
307 C	
PN-230 58.85	
PN-TW 37.09	
PN-325 4.06	

Starting Point	Formula
308 C	
PN-230 79.02	
PN-325 9.14	
PN-TW 6.48	
PN-SB 5.36	

Starting Point	Formula
309 C	
PN-230 56.37	
PN-SB 28.90	
PN-TW 10.61	
PN-325 4.12	

Starting Point	Formula
310 C	
PN-TW 95.52	
PN-230 3.98	
PN-325 0.50	

Starting Point	Formula
311 C	
PN-TW 91.06	
PN-230 7.35	
PN-325 1.59	

Starting Point	Formula
312 C	
PN-TW 74.97	
PN-230 19.23	
PN-325 5.80	

Starting Point	Formula
313 C	
PN-TW 63.07	
PN-230 29.95	
PN-325 6.98	

Starting Point	Formula
314 C	
PN-TW 44.25	
PN-230 42.74	
PN-325 13.01	

Starting Point	Formula
315 C	
PN-230 52.40	
PN-TW 27.12	
PN-325 16.71	
PN-SB 3.77	

Starting Point	Formula
316 C	
PN-230 40.58	
PN-SB 24.84	
PN-TW 18.56	
PN-325 16.02	

Starting Point	Formula
3105 C	
PN-TW 96.02	
PN-230 3.17	
PN-325 0.81	

Starting Point	Formula
3115 C	
PN-TW 90.88	
PN-230 6.26	
PN-325 2.86	

Starting Point	Formula
3125 C	
PN-TW 78.83	
PN-230 13.35	
PN-325 7.82	

Starting Point	Formula
3135 C	
PN-TW 58.82	
PN-230 27.43	
PN-325 13.75	

PolyDyne PN

Starting Point 3145 C PN-230 41.54 PN-TW 37.74 PN-325 20.23 PN-SB 0.49	Formula	Starting Point 3155 C PN-230 66.16 PN-325 28.86 PN-SB 4.98	Formula	Starting Point 3165 C PN-230 56.75 PN-325 26.23 PN-SB 17.02	Formula	Starting Point 317 C PN-TW 98.90 PN-230 1.10	Formula
Starting Point 318 C PN-TW 96.89 PN-230 2.07 PN-325 1.04	Formula	Starting Point 319 C PN-TW 91.73 PN-230 4.41 PN-325 3.86	Formula	Starting Point 320 C PN-TW 52.74 PN-325 25.56 PN-230 21.70	Formula	Starting Point 321 C PN-TW 34.91 PN-230 34.00 PN-325 31.09	Formula
Starting Point 322 C PN-325 59.76 PN-230 36.61 PN-127 3.63	Formula	Starting Point 323 C PN-325 90.24 PN-127 9.76	Formula	Starting Point 324 C PN-TW 95.47 PN-325 3.07 PN-230 1.46	Formula	Starting Point 325 C PN-TW 90.85 PN-325 5.13 PN-230 4.02	Formula
Starting Point 326 C PN-TW 75.53 PN-325 16.04 PN-230 8.43	Formula	Starting Point 327 C PN-325 63.44 PN-230 36.56	Formula	Starting Point 328 C PN-325 49.92 PN-230 26.52 PN-TW 18.67 PN-SB 4.89	Formula	Starting Point 329 C PN-325 54.26 PN-230 32.82 PN-SB 12.92	Formula

PolyDyne PN

Starting Point	Formula
330 C	
PN-325	36.53
PN-SB	25.92
PN-TW	20.38
PN-230	17.17

Starting Point	Formula
3242 C	
PN-TW	94.98
PN-325	3.31
PN-230	1.71

Starting Point	Formula
3252 C	
PN-TW	91.99
PN-325	5.66
PN-230	2.35

Starting Point	Formula
3262 C	
PN-TW	74.25
PN-325	19.58
PN-230	6.17

Starting Point	Formula
3272 C	
PN-TW	49.02
PN-325	39.93
PN-230	11.05

Starting Point	Formula
3282 C	
PN-325	50.94
PN-TW	36.11
PN-230	11.65
PN-127	1.30

Starting Point	Formula
3292 C	
PN-325	48.90
PN-230	17.42
PN-TW	16.94
PN-SB	16.74

Starting Point	Formula
3302 C	
PN-325	44.40
PN-SB	29.18
PN-TW	15.99
PN-230	10.43

Starting Point	Formula
3245 C	
PN-TW	95.14
PN-325	3.96
PN-230	0.90

Starting Point	Formula
3255 C	
PN-TW	89.97
PN-325	8.53
PN-230	1.50

Starting Point	Formula
3265 C	
PN-TW	77.66
PN-325	19.39
PN-230	2.95

Starting Point	Formula
3275 C	
PN-325	84.18
PN-230	15.82

Starting Point	Formula
3285 C	
PN-325	51.55
PN-TW	46.97
PN-127	1.48

Starting Point	Formula
3295 C	
PN-325	64.44
PN-TW	30.34
PN-SB	3.18
PN-127	2.04

Starting Point	Formula
3305 C	
PN-325	47.08
PN-SB	32.13
PN-TW	14.65
PN-230	6.14

Starting Point	Formula
3248 C	
PN-TW	92.09
PN-064	3.59
PN-230	3.00
PN-325	1.32

PolyDyne PN

Starting Point	Formula
3258 C	
PN-TW	86.03
PN-064	5.30
PN-230	4.69
PN-325	3.98

Starting Point	Formula
3268 C	
PN-TW	63.05
PN-325	22.20
PN-230	8.34
PN-064	6.41

Starting Point	Formula
3278 C	
PN-325	43.13
PN-TW	40.05
PN-230	9.82
PN-066	7.00

Starting Point	Formula
3288 C	
PN-325	34.29
PN-066	22.83
PN-TW	21.99
PN-230	20.89

Starting Point	Formula
3298 C	
PN-066	57.29
PN-230	36.32
PN-TW	6.39

Starting Point	Formula
3308 C	
PN-SB	41.46
PN-325	40.65
PN-TW	11.08
PN-230	6.81

Starting Point	Formula
331 C	
PN-TW	97.48
PN-325	2.52

Starting Point	Formula
332 C	
PN-TW	96.30
PN-325	3.70

Starting Point	Formula
333 C	
PN-TW	90.06
PN-325	9.94

Starting Point	Formula
334 C	
PN-325	60.88
PN-TW	37.19
PN-SB	1.93

Starting Point	Formula
335 C	
PN-325	58.36
PN-TW	32.52
PN-SB	9.12

Starting Point	Formula
336 C	
PN-325	53.38
PN-TW	29.78
PN-SB	16.84

Starting Point	Formula
337 C	
PN-TW	94.73
PN-325	4.19
PN-SB	1.08

Starting Point	Formula
338 C	
PN-TW	91.66
PN-325	6.98
PN-SB	1.36

Starting Point	Formula
339 C	
PN-TW	64.76
PN-325	33.19
PN-SB	2.05

Starting Point	Formula
340 C	
PN-325	78.78
PN-TW	18.75
PN-SB	2.47

PolyDyne PN

Starting Point	Formula
341 C	
PN-325	70.33
PN-TW	19.32
PN-SB	10.35

Starting Point	Formula
342 C	
PN-325	70.96
PN-SB	17.14
PN-TW	11.90

Starting Point	Formula
343 C	
PN-325	54.31
PN-SB	30.86
PN-TW	14.83

Starting Point	Formula
3375 C	
PN-TW	92.80
PN-325	5.40
PN-064	1.80

Starting Point	Formula
3385 C	
PN-TW	84.58
PN-325	11.49
PN-064	3.93

Starting Point	Formula
3395 C	
PN-TW	63.27
PN-325	28.12
PN-064	8.61

Starting Point	Formula
3405 C	
PN-325	84.27
PN-064	15.73

Starting Point	Formula
3415 C	
PN-325	59.42
PN-066	20.35
PN-TW	12.86
PN-SB	7.37

Starting Point	Formula
3425 C	
PN-325	52.27
PN-TW	17.04
PN-SB	16.79
PN-064	13.90

Starting Point	Formula
3435 C	
PN-325	51.57
PN-SB	37.04
PN-064	11.39

Starting Point	Formula
344 C	
PN-TW	92.67
PN-064	4.94
PN-230	1.27
PN-325	1.12

Starting Point	Formula
345 C	
PN-TW	87.81
PN-064	8.00
PN-325	2.30
PN-230	1.89

Starting Point	Formula
346 C	
PN-TW	77.65
PN-064	13.84
PN-325	5.70
PN-230	2.81

Starting Point	Formula
347 C	
PN-325	58.70
PN-064	27.36
PN-TW	13.94

Starting Point	Formula
348 C	
PN-064	58.31
PN-325	23.62
PN-230	18.07

Starting Point	Formula
349 C	
PN-325	53.66
PN-064	28.15
PN-SB	18.19

PolyDyne PN

Starting Point 350 C PN-SB 38.52 PN-325 29.66 PN-064 23.09 PN-TW 8.73	Formula	Starting Point 351 C PN-TW 93.02 PN-064 3.80 PN-325 3.18	Formula	Starting Point 352 C PN-TW 86.67 PN-064 7.31 PN-325 6.02	Formula	Starting Point 353 C PN-TW 80.44 PN-064 10.69 PN-325 8.87	Formula
Starting Point 354 C PN-064 51.38 PN-325 48.62	Formula	Starting Point 355 C PN-064 54.90 PN-325 39.71 PN-230 5.39	Formula	Starting Point 356 C PN-325 49.25 PN-064 39.06 PN-SB 11.69	Formula	Starting Point 357 C PN-SB 34.66 PN-325 34.21 PN-064 28.22 PN-TW 2.91	Formula
Starting Point 358 C PN-TW 80.29 PN-064 15.67 PN-325 4.04	Formula	Starting Point 359 C PN-TW 78.96 PN-064 16.59 PN-325 4.45	Formula	Starting Point 360 C PN-064 48.05 PN-TW 38.09 PN-325 13.86	Formula	Starting Point 361 C PN-064 58.37 PN-325 23.47 PN-TW 18.16	Formula
Starting Point 362 C PN-064 87.50 PN-230 12.50	Formula	Starting Point 363 C PN-064 85.75 PN-230 12.12 PN-SB 2.13	Formula	Starting Point 364 C PN-064 77.82 PN-230 12.74 PN-SB 9.44	Formula	Starting Point 365 C PN-TW 87.34 PN-064 11.12 PN-325 1.54	Formula

PolyDyne PN

Starting Point 366 C PN-TW 80.66 PN-064 17.00 PN-325 2.34	Formula	Starting Point 367 C PN-TW 63.38 PN-064 32.40 PN-325 4.22	Formula	Starting Point 368 C PN-064 67.37 PN-TW 21.30 PN-325 11.33	Formula	Starting Point 369 C PN-064 81.84 PN-325 15.65 PN-SB 2.51	Formula
Starting Point 370 C PN-064 87.81 PN-230 8.36 PN-SB 3.83	Formula	Starting Point 371 C PN-064 75.39 PN-SB 17.48 PN-230 7.13	Formula	Starting Point 372 C PN-TW 85.53 PN-064 13.30 PN-325 1.17	Formula	Starting Point 373 C PN-TW 73.82 PN-064 24.22 PN-325 1.96	Formula
Starting Point 374 C PN-TW 50.08 PN-064 46.59 PN-325 3.33	Formula	Starting Point 375 C PN-064 92.57 PN-325 7.43	Formula	Starting Point 376 C PN-064 92.88 PN-325 4.86 PN-230 2.26	Formula	Starting Point 377 C PN-064 84.94 PN-325 8.73 PN-SB 6.33	Formula
Starting Point 378 C PN-064 67.47 PN-SB 24.71 PN-325 7.82	Formula	Starting Point 379 C PN-TW 63.00 PN-064 35.79 PN-325 1.21	Formula	Starting Point 380 C PN-064 59.55 PN-TW 38.66 PN-325 1.79	Formula	Starting Point 381 C PN-064 81.95 PN-TW 15.47 PN-325 2.58	Formula

PolyDyne PN

Starting Point 382 C PN-064 96.22 PN-325 3.78	Formula	Starting Point 383 C PN-064 95.44 PN-230 2.49 PN-SB 2.07	Formula	Starting Point 384 C PN-064 91.21 PN-SB 6.17 PN-230 2.62	Formula	Starting Point 385 C PN-064 65.41 PN-SB 18.63 PN-TW 13.20 PN-325 2.76	Formula
Starting Point 386 C PN-TW 60.90 PN-064 38.08 PN-325 1.02	Formula	Starting Point 387 C PN-064 67.86 PN-TW 30.58 PN-325 1.56	Formula	Starting Point 388 C PN-064 97.84 PN-325 2.16	Formula	Starting Point 389 C PN-064 97.44 PN-325 2.56	Formula
Starting Point 390 C PN-064 95.72 PN-325 2.53 PN-SB 1.75	Formula	Starting Point 391 C PN-064 89.57 PN-SB 8.12 PN-325 2.31	Formula	Starting Point 392 C PN-064 82.69 PN-SB 14.93 PN-325 2.38	Formula	Starting Point 393 C PN-TW 79.85 PN-064 19.75 PN-325 0.40	Formula
Starting Point 394 C PN-064 53.24 PN-TW 45.97 PN-325 0.79	Formula	Starting Point 395 C PN-064 98.58 PN-325 1.42	Formula	Starting Point 396 C PN-064 98.00 PN-325 2.00	Formula	Starting Point 397 C PN-064 96.08 PN-SB 2.39 PN-325 1.53	Formula

PolyDyne PN

Starting Point	Formula
398 C	
PN-064	93.52
PN-SB	5.06
PN-325	1.42

Starting Point	Formula
399 C	
PN-064	89.95
PN-SB	8.70
PN-325	1.35

Starting Point	Formula
3935 C	
PN-TW	71.43
PN-064	28.17
PN-325	0.40

Starting Point	Formula
3945 C	
PN-064	93.50
PN-TW	6.00
PN-325	0.50

Starting Point	Formula
3955 C	
PN-064	94.23
PN-TW	5.00
PN-325	0.77

Starting Point	Formula
3965 C	
PN-064	93.80
PN-TW	5.00
PN-325	1.20

Starting Point	Formula
3975 C	
PN-064	90.40
PN-114	6.25
PN-325	3.35

Starting Point	Formula
3985 C	
PN-064	89.11
PN-SB	10.18
PN-325	0.71

Starting Point	Formula
3995 C	
PN-064	74.06
PN-SB	24.99
PN-325	0.95

Starting Point	Formula
400 C	
PN-TW	94.38
PN-121	2.28
PN-064	2.13
PN-230	1.21

Starting Point	Formula
401 C	
PN-TW	87.89
PN-066	5.97
PN-164	3.72
PN-325	2.42

Starting Point	Formula
402 C	
PN-TW	76.93
PN-066	13.13
PN-165	6.42
PN-325	3.52

Starting Point	Formula
403 C	
PN-TW	80.29
PN-SB	12.37
PN-064	6.35
PN-164	0.99

Starting Point	Formula
404 C	
PN-TW	62.90
PN-SB	20.92
PN-064	13.65
PN-164	2.53

Starting Point	Formula
405 C	
PN-TW	39.80
PN-SB	32.27
PN-064	23.01
PN-165	4.92

Starting Point	Formula
406 C	
PN-TW	94.75
PN-SB	3.59
PN-064	1.18
PN-164	0.48

PolyDyne PN

Starting Point	Formula
407 C	
PN-TW 88.03	
PN-064 4.77	
PN-164 4.68	
PN-325 2.52	

Starting Point	Formula
408 C	
PN-TW 84.41	
PN-SB 9.71	
PN-064 4.08	
PN-164 1.80	

Starting Point	Formula
409 C	
PN-TW 76.08	
PN-SB 13.98	
PN-064 7.12	
PN-164 2.82	

Starting Point	Formula
410 C	
PN-TW 59.83	
PN-SB 22.14	
PN-064 12.37	
PN-164 5.66	

Starting Point	Formula
411 C	
PN-TW 39.15	
PN-SB 32.87	
PN-064 18.53	
PN-164 9.45	

Starting Point	Formula
412 C	
PN-SB 66.38	
PN-064 19.74	
PN-164 12.11	
PN-TW 1.77	

Starting Point	Formula
413 C	
PN-TW 95.60	
PN-SB 3.12	
PN-064 1.28	

Starting Point	Formula
414 C	
PN-TW 92.42	
PN-SB 5.45	
PN-064 2.13	

Starting Point	Formula
415 C	
PN-TW 85.15	
PN-SB 10.04	
PN-064 4.81	

Starting Point	Formula
416 C	
PN-TW 75.41	
PN-SB 15.84	
PN-064 8.75	

Starting Point	Formula
417 C	
PN-TW 56.96	
PN-SB 22.98	
PN-066 18.92	
PN-230 1.14	

Starting Point	Formula
418 C	
PN-TW 39.80	
PN-SB 32.37	
PN-066 26.12	
PN-230 1.71	

Starting Point	Formula
419 C	
PN-SB 91.35	
PN-064 5.73	
PN-325 2.92	

Starting Point	Formula
420 C	
PN-TW 95.78	
PN-164 1.75	
PN-325 1.26	
PN-066 1.21	

Starting Point	Formula
421 C	
PN-TW 93.00	
PN-164 3.12	
PN-325 2.13	
PN-064 1.75	

Starting Point	Formula
422 C	
PN-TW 88.82	
PN-164 4.91	
PN-325 3.34	
PN-064 2.93	

PolyDyne PN

Starting Point	Formula
423 C	
PN-TW	69.11
PN-066	15.00
PN-165	9.95
PN-325	5.94

Starting Point	Formula
424 C	
PN-TW	52.78
PN-064	19.26
PN-165	18.06
PN-325	9.90

Starting Point	Formula
425 C	
PN-TW	49.89
PN-SB	39.53
PN-064	10.58

Starting Point	Formula
426 C	
PN-SB	92.58
PN-127	7.42

Starting Point	Formula
427 C	
PN-TW	98.45
PN-SB	1.17
PN-230	0.38

Starting Point	Formula
428 C	
PN-TW	96.88
PN-SB	2.57
PN-127	0.55

Starting Point	Formula
429 C	
PN-TW	93.03
PN-SB	5.02
PN-164	1.05
PN-230	0.90

Starting Point	Formula
430 C	
PN-TW	85.68
PN-SB	11.86
PN-164	1.29
PN-230	1.17

Starting Point	Formula
431 C	
PN-TW	69.69
PN-SB	22.66
PN-164	4.24
PN-230	3.41

Starting Point	Formula
432 C	
PN-TW	43.17
PN-SB	38.00
PN-164	11.29
PN-230	7.54

Starting Point	Formula
433 C	
PN-SB	56.81
PN-164	28.48
PN-230	7.75
PN-TW	6.96

Starting Point	Formula
434 C	
PN-TW	97.22
PN-121	1.98
PN-230	0.80

Starting Point	Formula
435 C	
PN-TW	95.38
PN-121	3.31
PN-230	1.31

Starting Point	Formula
436 C	
PN-TW	89.02
PN-165	4.59
PN-114	3.32
PN-325	3.07

Starting Point	Formula
437 C	
PN-TW	59.13
PN-165	15.17
PN-114	14.85
PN-325	10.85

Starting Point	Formula
438 C	
PN-121	47.14
PN-325	27.60
PN-TW	25.26

PolyDyne PN

Starting Point	Formula
439 C	
PN-325	28.65
PN-164	28.17
PN-114	26.58
PN-TW	16.60

Starting Point	Formula
440 C	
PN-121	40.35
PN-SB	30.12
PN-325	24.47
PN-TW	5.06

Starting Point	Formula
441 C	
PN-TW	96.84
PN-325	1.49
PN-121	1.04
PN-165	0.63

Starting Point	Formula
442 C	
PN-TW	93.28
PN-325	3.14
PN-121	2.57
PN-165	1.01

Starting Point	Formula
443 C	
PN-TW	88.95
PN-325	5.11
PN-114	4.56
PN-127	1.38

Starting Point	Formula
444 C	
PN-TW	71.99
PN-325	11.63
PN-165	8.45
PN-114	7.93

Starting Point	Formula
445 C	
PN-TW	36.68
PN-325	26.34
PN-165	19.06
PN-114	17.92

Starting Point	Formula
446 C	
PN-325	34.02
PN-165	25.28
PN-114	23.26
PN-TW	17.44

Starting Point	Formula
447 C	
PN-SB	51.71
PN-TW	21.18
PN-114	14.24
PN-325	12.87

Starting Point	Formula
Warm Gray 1 C	
PN-TW	98.78
PN-121	0.83
PN-230	0.39

Starting Point	Formula
Warm Gray 2 C	
PN-TW	98.09
PN-114	0.88
PN-230	0.56
PN-164	0.47

Starting Point	Formula
Warm Gray 3 C	
PN-TW	96.17
PN-SB	3.37
PN-114	0.46

Starting Point	Formula
Warm Gray 4 C	
PN-TW	92.05
PN-SB	5.36
PN-066	2.18
PN-121	0.41

Starting Point	Formula
Warm Gray 5 C	
PN-TW	89.28
PN-SB	7.35
PN-066	2.50
PN-114	0.87

Starting Point	Formula
Warm Gray 6 C	
PN-TW	86.19
PN-SB	8.65
PN-066	4.47
PN-121	0.69

Starting Point	Formula
Warm Gray 7 C	
PN-TW	81.67
PN-SB	11.24
PN-066	5.99
PN-121	1.10

PolyDyne PN

Starting Point	Formula
Warm Gray 8 C	
PN-TW 74.63	
PN-SB 14.55	
PN-066 9.39	
PN-121 1.43	

Starting Point	Formula
Warm Gray 9 C	
PN-TW 69.56	
PN-SB 17.05	
PN-066 11.59	
PN-121 1.80	

Starting Point	Formula
Warm Gray 10 C	
PN-TW 58.42	
PN-SB 22.74	
PN-066 16.08	
PN-121 2.76	

Starting Point	Formula
Warm Gray 11 C	
PN-TW 41.43	
PN-SB 32.61	
PN-066 22.04	
PN-121 3.92	

Starting Point	Formula
Cool Gray 1 C	
PN-TW 99.26	
PN-164 0.48	
PN-230 0.26	

Starting Point	Formula
Cool Gray 2 C	
PN-TW 98.28	
PN-SB 1.01	
PN-164 0.44	
PN-230 0.27	

Starting Point	Formula
Cool Gray 3 C	
PN-TW 96.64	
PN-SB 2.86	
PN-165 0.30	
PN-230 0.20	

Starting Point	Formula
Cool Gray 4 C	
PN-TW 95.52	
PN-SB 3.73	
PN-164 0.43	
PN-230 0.32	

Starting Point	Formula
Cool Gray 5 C	
PN-TW 92.70	
PN-SB 5.61	
PN-164 0.94	
PN-325 0.75	

Starting Point	Formula
Cool Gray 6 C	
PN-TW 92.29	
PN-114 3.53	
PN-230 2.41	
PN-164 1.77	

Starting Point	Formula
Cool Gray 7 C	
PN-TW 90.23	
PN-SB 6.69	
PN-164 1.79	
PN-325 1.29	

Starting Point	Formula
Cool Gray 8 C	
PN-TW 86.84	
PN-SB 9.77	
PN-164 1.97	
PN-325 1.42	

Starting Point	Formula
Cool Gray 9 C	
PN-TW 82.14	
PN-SB 14.85	
PN-164 1.75	
PN-325 1.26	

Starting Point	Formula
Cool Gray 10 C	
PN-TW 72.09	
PN-SB 25.88	
PN-164 1.28	
PN-325 0.75	

Starting Point	Formula
Cool Gray 11 C	
PN-TW 62.19	
PN-SB 34.03	
PN-165 2.64	
PN-325 1.14	

Starting Point	Formula
448 C	
PN-066 52.90	
PN-SB 47.10	

PolyDyne PN

Starting Point	Formula
449 C	
PN-066	58.52
PN-SB	40.50
PN-230	0.98

Starting Point	Formula
450 C	
PN-066	62.76
PN-SB	36.16
PN-230	1.08

Starting Point	Formula
451 C	
PN-TW	62.44
PN-066	28.71
PN-SB	8.17
PN-230	0.68

Starting Point	Formula
452 C	
PN-TW	79.15
PN-066	15.44
PN-SB	4.95
PN-230	0.46

Starting Point	Formula
453 C	
PN-TW	88.94
PN-066	8.01
PN-SB	2.78
PN-230	0.27

Starting Point	Formula
454 C	
PN-TW	93.76
PN-066	4.48
PN-SB	1.76

Starting Point	Formula
4485 C	
PN-066	57.13
PN-SB	35.46
PN-064	7.41

Starting Point	Formula
4495 C	
PN-066	83.81
PN-SB	14.75
PN-230	1.44

Starting Point	Formula
4505 C	
PN-066	65.19
PN-TW	24.98
PN-SB	8.66
PN-230	1.17

Starting Point	Formula
4515 C	
PN-TW	61.09
PN-064	18.62
PN-066	13.15
PN-SB	7.14

Starting Point	Formula
4525 C	
PN-TW	75.98
PN-066	20.48
PN-SB	3.13
PN-230	0.41

Starting Point	Formula
4535 C	
PN-TW	85.96
PN-066	11.87
PN-SB	1.92
PN-230	0.25

Starting Point	Formula
4545 C	
PN-TW	93.57
PN-066	5.15
PN-SB	1.28

Starting Point	Formula
455 C	
PN-064	69.04
PN-SB	30.96

Starting Point	Formula
456 C	
PN-064	72.73
PN-066	14.98
PN-SB	12.29

Starting Point	Formula
457 C	
PN-064	69.68
PN-066	22.76
PN-SB	7.56

PolyDyne PN

Starting Point	Formula
458 C	
PN-TW	64.06
PN-064	34.00
PN-SB	1.94

Starting Point	Formula
459 C	
PN-TW	73.50
PN-064	24.89
PN-SB	1.61

Starting Point	Formula
460 C	
PN-TW	80.54
PN-066	16.58
PN-064	2.21
PN-325	0.67

Starting Point	Formula
461 C	
PN-TW	90.12
PN-066	9.49
PN-325	0.39

Starting Point	Formula
462 C	
PN-066	54.90
PN-SB	38.33
PN-114	6.77

Starting Point	Formula
463 C	
PN-064	65.03
PN-SB	24.85
PN-164	10.12

Starting Point	Formula
464 C	
PN-064	70.86
PN-SB	16.47
PN-165	12.67

Starting Point	Formula
465 C	
PN-TW	56.59
PN-066	36.49
PN-SB	5.89
PN-164	1.03

Starting Point	Formula
466 C	
PN-TW	78.25
PN-064	16.63
PN-SB	3.54
PN-164	1.58

Starting Point	Formula
467 C	
PN-TW	88.01
PN-064	8.99
PN-SB	2.19
PN-164	0.81

Starting Point	Formula
468 C	
PN-TW	93.79
PN-064	4.48
PN-SB	1.41
PN-164	0.32

Starting Point	Formula
4625 C	
PN-SB	45.93
PN-064	33.14
PN-114	20.93

Starting Point	Formula
4635 C	
PN-066	47.77
PN-114	20.15
PN-SB	16.18
PN-TW	15.90

Starting Point	Formula
4645 C	
PN-TW	51.84
PN-066	27.64
PN-114	11.45
PN-SB	9.07

Starting Point	Formula
4655 C	
PN-TW	73.91
PN-066	13.48
PN-114	6.77
PN-SB	5.84

Starting Point	Formula
4665 C	
PN-TW	86.62
PN-066	6.39
PN-114	3.59
PN-SB	3.40

PolyDyne PN

Starting Point	Formula
4675 C	
PN-TW	93.36
PN-066	2.60
PN-114	2.06
PN-SB	1.98

Starting Point	Formula
4685 C	
PN-TW	96.50
PN-066	1.37
PN-SB	1.19
PN-114	0.94

Starting Point	Formula
469 C	
PN-114	87.62
PN-230	12.38

Starting Point	Formula
470 C	
PN-066	58.17
PN-114	28.22
PN-SB	13.61

Starting Point	Formula
471 C	
PN-066	58.20
PN-114	33.73
PN-SB	8.07

Starting Point	Formula
472 C	
PN-TW	67.82
PN-066	20.47
PN-114	9.45
PN-SB	2.26

Starting Point	Formula
473 C	
PN-TW	86.77
PN-066	7.22
PN-114	4.70
PN-SB	1.31

Starting Point	Formula
474 C	
PN-TW	94.17
PN-114	3.18
PN-064	1.88
PN-SB	0.77

Starting Point	Formula
475 C	
PN-TW	95.55
PN-066	1.95
PN-114	1.93
PN-SB	0.57

Starting Point	Formula
4695 C	
PN-114	61.26
PN-SB	32.52
PN-127	6.22

Starting Point	Formula
4705 C	
PN-066	50.11
PN-TW	17.64
PN-SB	17.41
PN-164	14.84

Starting Point	Formula
4715 C	
PN-TW	49.57
PN-066	31.91
PN-SB	10.18
PN-164	8.34

Starting Point	Formula
4725 C	
PN-TW	71.02
PN-064	16.19
PN-165	6.44
PN-SB	6.35

Starting Point	Formula
4735 C	
PN-TW	88.02
PN-064	5.80
PN-SB	3.59
PN-164	2.59

Starting Point	Formula
4745 C	
PN-TW	93.41
PN-064	2.95
PN-SB	2.17
PN-164	1.47

Starting Point	Formula
4755 C	
PN-TW	96.43
PN-064	1.45
PN-SB	1.41
PN-164	0.71

PolyDyne PN

Starting Point	Formula
476 C	
PN-066	51.93
PN-SB	36.83
PN-164	11.24

Starting Point	Formula
477 C	
PN-064	50.16
PN-SB	28.50
PN-164	21.34

Starting Point	Formula
478 C	
PN-064	55.49
PN-164	23.88
PN-SB	20.63

Starting Point	Formula
479 C	
PN-TW	60.55
PN-066	26.85
PN-SB	6.56
PN-164	6.04

Starting Point	Formula
480 C	
PN-TW	88.24
PN-064	4.63
PN-SB	3.89
PN-121	3.24

Starting Point	Formula
481 C	
PN-TW	93.60
PN-064	3.14
PN-SB	1.86
PN-164	1.40

Starting Point	Formula
482 C	
PN-TW	96.65
PN-064	1.45
PN-SB	1.19
PN-164	0.71

Starting Point	Formula
483 C	
PN-114	68.35
PN-164	22.86
PN-230	8.79

Starting Point	Formula
484 C	
PN-114	61.15
PN-164	20.17
PN-TW	9.78
PN-SB	8.90

Starting Point	Formula
485 C	
PN-066	61.30
PN-164	27.93
PN-114	10.77

Starting Point	Formula
486 C	
PN-TW	87.02
PN-114	8.57
PN-164	3.62
PN-SB	0.79

Starting Point	Formula
487 C	
PN-TW	84.75
PN-066	10.78
PN-164	4.47

Starting Point	Formula
488 C	
PN-TW	91.92
PN-064	5.04
PN-164	3.04

Starting Point	Formula
489 C	
PN-TW	95.01
PN-064	3.10
PN-164	1.89

Starting Point	Formula
490 C	
PN-066	47.04
PN-121	40.67
PN-230	12.29

Starting Point	Formula
491 C	
PN-121	44.82
PN-114	30.70
PN-TW	16.46
PN-230	8.02

PolyDyne PN

Starting Point	Formula
492 C	
PN-121	55.62
PN-TW	29.89
PN-066	7.91
PN-325	6.58

Starting Point	Formula
493 C	
PN-TW	82.08
PN-165	9.92
PN-114	5.81
PN-SB	2.19

Starting Point	Formula
494 C	
PN-TW	92.74
PN-121	3.09
PN-165	3.02
PN-SB	1.15

Starting Point	Formula
495 C	
PN-TW	93.23
PN-165	4.09
PN-064	2.68

Starting Point	Formula
496 C	
PN-TW	94.85
PN-165	2.77
PN-066	2.38

Starting Point	Formula
497 C	
PN-114	40.40
PN-SB	40.34
PN-TW	15.67
PN-325	3.59

Starting Point	Formula
498 C	
PN-114	43.68
PN-SB	30.26
PN-TW	26.06

Starting Point	Formula
499 C	
PN-121	41.30
PN-114	25.75
PN-TW	19.99
PN-325	12.96

Starting Point	Formula
500 C	
PN-TW	81.15
PN-165	9.10
PN-114	7.72
PN-325	2.03

Starting Point	Formula
501 C	
PN-TW	93.03
PN-165	3.44
PN-114	2.95
PN-230	0.58

Starting Point	Formula
502 C	
PN-TW	95.89
PN-121	2.06
PN-165	1.48
PN-325	0.57

Starting Point	Formula
503 C	
PN-TW	97.46
PN-121	1.23
PN-165	1.31

Starting Point	Formula
4975 C	
PN-SB	52.00
PN-066	29.22
PN-114	18.78

Starting Point	Formula
4985 C	
PN-TW	48.79
PN-121	31.42
PN-SB	18.99
PN-114	0.80

Starting Point	Formula
4995 C	
PN-TW	71.37
PN-SB	10.06
PN-164	9.91
PN-114	8.66

Starting Point	Formula
5005 C	
PN-TW	83.47
PN-121	13.95
PN-230	1.93
PN-325	0.65

PolyDyne PN

Starting Point 5015 C PN-TW 93.24 PN-121 5.66 PN-230 1.10	Formula	Starting Point 5025 C PN-TW 95.75 PN-121 3.55 PN-230 0.70	Formula	Starting Point 5035 C PN-TW 97.59 PN-121 1.98 PN-230 0.43	Formula	Starting Point 504 C PN-066 49.43 PN-SB 35.47 PN-164 15.10	Formula
Starting Point 505 C PN-121 50.74 PN-TW 24.83 PN-SB 24.43	Formula	Starting Point 506 C PN-121 56.14 PN-TW 34.21 PN-325 5.24 PN-127 4.41	Formula	Starting Point 507 C PN-TW 86.85 PN-165 6.97 PN-121 5.05 PN-325 1.13	Formula	Starting Point 508 C PN-TW 93.11 PN-165 3.81 PN-121 2.43 PN-325 0.65	Formula
Starting Point 509 C PN-TW 95.70 PN-165 2.55 PN-121 1.38 PN-325 0.37	Formula	Starting Point 510 C PN-TW 96.84 PN-165 1.93 PN-121 1.23	Formula	Starting Point 511 C PN-165 63.80 PN-121 18.82 PN-325 13.74 PN-TW 3.64	Formula	Starting Point 512 C PN-165 72.61 PN-TW 17.60 PN-325 7.01 PN-121 2.78	Formula
Starting Point 513 C PN-165 61.56 PN-TW 35.48 PN-230 2.96	Formula	Starting Point 514 C PN-TW 84.95 PN-165 14.42 PN-230 0.63	Formula	Starting Point 515 C PN-TW 92.42 PN-165 7.23 PN-230 0.35	Formula	Starting Point 516 C PN-TW 95.47 PN-165 4.53	Formula

PolyDyne PN

Starting Point	Formula
517 C	
PN-TW 97.37	
PN-165 2.63	

Starting Point	Formula
5115 C	
PN-121 48.34	
PN-165 29.17	
PN-230 13.71	
PN-TW 8.78	

Starting Point	Formula
5125 C	
PN-165 40.18	
PN-TW 38.23	
PN-SB 21.59	

Starting Point	Formula
5135 C	
PN-TW 60.84	
PN-165 24.50	
PN-SB 14.66	

Starting Point	Formula
5145 C	
PN-TW 82.93	
PN-164 13.40	
PN-230 2.44	
PN-SB 1.23	

Starting Point	Formula
5155 C	
PN-TW 92.82	
PN-164 5.30	
PN-230 1.12	
PN-SB 0.76	

Starting Point	Formula
5165 C	
PN-TW 97.13	
PN-164 2.28	
PN-230 0.59	

Starting Point	Formula
5175 C	
PN-TW 98.05	
PN-165 1.33	
PN-230 0.62	

Starting Point	Formula
518 C	
PN-165 48.06	
PN-SB 35.62	
PN-TW 13.13	
PN-325 3.19	

Starting Point	Formula
519 C	
PN-165 65.27	
PN-TW 14.58	
PN-SB 11.46	
PN-325 8.69	

Starting Point	Formula
520 C	
PN-165 69.89	
PN-TW 18.72	
PN-325 10.61	
PN-066 0.78	

Starting Point	Formula
521 C	
PN-TW 83.58	
PN-165 10.76	
PN-164 3.52	
PN-230 2.14	

Starting Point	Formula
522 C	
PN-TW 90.76	
PN-165 5.76	
PN-164 2.13	
PN-230 1.35	

Starting Point	Formula
523 C	
PN-TW 94.46	
PN-165 3.14	
PN-164 1.52	
PN-230 0.88	

Starting Point	Formula
524 C	
PN-TW 97.32	
PN-165 1.79	
PN-230 0.46	
PN-164 0.43	

Starting Point	Formula
5185 C	
PN-114 32.00	
PN-SB 29.36	
PN-TW 27.86	
PN-127 10.78	

PolyDyne PN

Starting Point	Formula
5195 C	
PN-TW	35.18
PN-SB	32.21
PN-165	22.66
PN-121	9.95

Starting Point	Formula
5205 C	
PN-TW	68.13
PN-SB	16.22
PN-165	12.24
PN-121	3.41

Starting Point	Formula
5215 C	
PN-TW	86.14
PN-165	6.28
PN-114	5.19
PN-230	2.39

Starting Point	Formula
5225 C	
PN-TW	94.34
PN-164	4.18
PN-325	1.48

Starting Point	Formula
5235 C	
PN-TW	97.06
PN-121	2.06
PN-230	0.88

Starting Point	Formula
5245 C	
PN-TW	98.07
PN-121	0.99
PN-165	0.48
PN-230	0.46

Starting Point	Formula
525 C	
PN-165	49.23
PN-TW	20.13
PN-SB	18.56
PN-127	12.08

Starting Point	Formula
526 C	
PN-165	89.40
PN-230	8.87
PN-325	1.73

Starting Point	Formula
527 C	
PN-TW	71.71
PN-127	28.29

Starting Point	Formula
528 C	
PN-TW	87.80
PN-127	6.37
PN-165	5.83

Starting Point	Formula
529 C	
PN-TW	96.42
PN-127	2.43
PN-165	1.15

Starting Point	Formula
530 C	
PN-TW	97.58
PN-127	1.77
PN-165	0.65

Starting Point	Formula
531 C	
PN-TW	98.88
PN-127	1.12

Starting Point	Formula
5255 C	
PN-SB	32.02
PN-127	29.64
PN-TW	27.07
PN-121	11.27

Starting Point	Formula
5265 C	
PN-TW	46.70
PN-127	24.71
PN-SB	23.78
PN-325	4.81

Starting Point	Formula
5275 C	
PN-TW	66.11
PN-SB	19.51
PN-127	11.29
PN-230	3.09

PolyDyne PN

Starting Point	Formula
5285 C	
PN-TW 85.70	
PN-SB 9.52	
PN-127 3.52	
PN-230 1.26	

Starting Point	Formula
5295 C	
PN-TW 92.36	
PN-164 4.58	
PN-230 2.11	
PN-SB 0.95	

Starting Point	Formula
5305 C	
PN-TW 96.21	
PN-164 2.27	
PN-230 1.08	
PN-SB 0.44	

Starting Point	Formula
5315 C	
PN-TW 98.68	
PN-121 0.57	
PN-230 0.47	
PN-127 0.28	

Starting Point	Formula
532 C	
PN-164 54.39	
PN-325 32.50	
PN-TW 11.84	
PN-230 1.27	

Starting Point	Formula
533 C	
PN-165 51.90	
PN-325 29.71	
PN-SB 10.07	
PN-TW 8.32	

Starting Point	Formula
534 C	
PN-TW 47.69	
PN-SB 19.65	
PN-230 18.49	
PN-127 14.17	

Starting Point	Formula
535 C	
PN-TW 91.95	
PN-325 3.12	
PN-127 2.74	
PN-064 2.19	

Starting Point	Formula
536 C	
PN-TW 94.75	
PN-325 2.08	
PN-127 1.78	
PN-064 1.39	

Starting Point	Formula
537 C	
PN-TW 96.64	
PN-165 1.75	
PN-230 0.95	
PN-SB 0.66	

Starting Point	Formula
538 C	
PN-TW 98.33	
PN-165 1.08	
PN-230 0.59	

Starting Point	Formula
539 C	
PN-164 56.98	
PN-230 31.23	
PN-TW 11.79	

Starting Point	Formula
540 C	
PN-230 34.93	
PN-164 28.01	
PN-165 25.84	
PN-TW 11.22	

Starting Point	Formula
541 C	
PN-230 44.55	
PN-165 39.82	
PN-066 15.63	

Starting Point	Formula
542 C	
PN-TW 89.85	
PN-230 6.49	
PN-164 2.55	
PN-127 1.11	

Starting Point	Formula
543 C	
PN-TW 94.77	
PN-165 2.67	
PN-230 2.56	

PolyDyne PN

Starting Point	Formula
544 C	
PN-TW 98.40	
PN-230 1.08	
PN-127 0.52	

Starting Point	Formula
545 C	
PN-TW 98.81	
PN-230 0.78	
PN-127 0.41	

Starting Point	Formula
5395 C	
PN-SB 58.03	
PN-165 17.76	
PN-127 15.42	
PN-TW 8.79	

Starting Point	Formula
5405 C	
PN-TW 63.14	
PN-230 13.65	
PN-164 13.51	
PN-SB 9.70	

Starting Point	Formula
5415 C	
PN-TW 76.14	
PN-230 8.82	
PN-164 8.05	
PN-SB 6.99	

Starting Point	Formula
5425 C	
PN-TW 85.56	
PN-164 5.97	
PN-230 5.08	
PN-064 3.39	

Starting Point	Formula
5435 C	
PN-TW 94.35	
PN-164 2.53	
PN-230 2.13	
PN-064 0.99	

Starting Point	Formula
5445 C	
PN-TW 97.12	
PN-164 1.42	
PN-230 1.18	
PN-064 0.28	

Starting Point	Formula
5455 C	
PN-TW 98.59	
PN-164 0.71	
PN-230 0.70	

Starting Point	Formula
546 C	
PN-164 42.47	
PN-064 31.54	
PN-230 25.99	

Starting Point	Formula
547 C	
PN-230 53.41	
PN-114 27.29	
PN-165 19.30	

Starting Point	Formula
548 C	
PN-230 50.67	
PN-121 30.30	
PN-TW 19.03	

Starting Point	Formula
549 C	
PN-TW 83.14	
PN-230 8.19	
PN-164 5.45	
PN-064 3.22	

Starting Point	Formula
550 C	
PN-TW 91.76	
PN-230 3.93	
PN-164 2.97	
PN-064 1.34	

Starting Point	Formula
551 C	
PN-TW 95.23	
PN-230 2.27	
PN-164 1.80	
PN-064 0.70	

Starting Point	Formula
552 C	
PN-TW 97.72	
PN-230 1.23	
PN-164 1.05	

PolyDyne PN

Starting Point	Formula
5463 C	
PN-SB 46.51	
PN-230 45.80	
PN-164 7.69	

Starting Point	Formula
5473 C	
PN-TW 41.33	
PN-230 27.27	
PN-066 16.67	
PN-SB 14.73	

Starting Point	Formula
5483 C	
PN-TW 78.06	
PN-SB 9.17	
PN-230 8.55	
PN-064 4.22	

Starting Point	Formula
5493 C	
PN-TW 90.97	
PN-SB 4.67	
PN-230 3.27	
PN-064 1.09	

Starting Point	Formula
5503 C	
PN-TW 95.88	
PN-SB 2.55	
PN-230 1.57	

Starting Point	Formula
5513 C	
PN-TW 97.89	
PN-230 1.16	
PN-114 0.52	
PN-164 0.43	

Starting Point	Formula
5523 C	
PN-TW 98.96	
PN-230 0.63	
PN-164 0.41	

Starting Point	Formula
5467 C	
PN-164 41.50	
PN-325 33.73	
PN-064 24.77	

Starting Point	Formula
5477 C	
PN-066 50.89	
PN-165 17.35	
PN-TW 17.17	
PN-230 14.59	

Starting Point	Formula
5487 C	
PN-TW 72.20	
PN-SB 17.73	
PN-064 6.37	
PN-230 3.70	

Starting Point	Formula
5497 C	
PN-TW 87.73	
PN-SB 8.40	
PN-064 2.25	
PN-230 1.62	

Starting Point	Formula
5507 C	
PN-TW 94.57	
PN-SB 4.68	
PN-230 0.75	

Starting Point	Formula
5517 C	
PN-TW 97.06	
PN-SB 2.34	
PN-230 0.60	

Starting Point	Formula
5527 C	
PN-TW 98.02	
PN-SB 1.48	
PN-230 0.50	

Starting Point	Formula
553 C	
PN-066 50.54	
PN-SB 39.53	
PN-230 9.93	

Starting Point	Formula
554 C	
PN-066 80.27	
PN-230 15.78	
PN-127 3.95	

PolyDyne PN

Starting Point	Formula
555 C	
PN-066	73.98
PN-230	17.99
PN-165	8.03

Starting Point	Formula
556 C	
PN-TW	77.91
PN-064	12.11
PN-SB	6.04
PN-230	3.94

Starting Point	Formula
557 C	
PN-TW	89.40
PN-064	5.22
PN-SB	3.48
PN-230	1.90

Starting Point	Formula
558 C	
PN-TW	93.64
PN-064	2.90
PN-SB	2.27
PN-230	1.19

Starting Point	Formula
559 C	
PN-TW	96.20
PN-064	1.57
PN-SB	1.51
PN-230	0.72

Starting Point	Formula
5535 C	
PN-325	41.43
PN-164	35.95
PN-064	22.62

Starting Point	Formula
5545 C	
PN-TW	48.77
PN-SB	22.63
PN-066	14.50
PN-325	14.10

Starting Point	Formula
5555 C	
PN-TW	73.42
PN-SB	12.62
PN-066	7.57
PN-325	6.39

Starting Point	Formula
5565 C	
PN-TW	86.74
PN-SB	7.02
PN-066	3.19
PN-325	3.05

Starting Point	Formula
5575 C	
PN-TW	92.53
PN-SB	4.30
PN-325	1.72
PN-066	1.45

Starting Point	Formula
5585 C	
PN-TW	96.85
PN-SB	2.15
PN-325	1.00

Starting Point	Formula
5595 C	
PN-TW	98.45
PN-121	0.76
PN-325	0.46
PN-230	0.33

Starting Point	Formula
560 C	
PN-325	40.09
PN-164	28.59
PN-064	20.12
PN-TW	11.20

Starting Point	Formula
561 C	
PN-325	51.75
PN-TW	31.61
PN-121	16.03
PN-127	0.61

Starting Point	Formula
562 C	
PN-TW	45.60
PN-325	44.44
PN-121	9.30
PN-127	0.66

Starting Point	Formula
563 C	
PN-TW	87.32
PN-325	9.39
PN-121	2.24
PN-165	1.05

PolyDyne PN

Starting Point	Formula
564 C	
PN-TW	94.34
PN-325	4.36
PN-121	1.30

Starting Point	Formula
565 C	
PN-TW	96.52
PN-325	2.13
PN-165	0.98
PN-064	0.37

Starting Point	Formula
566 C	
PN-TW	99.00
PN-325	1.00

Starting Point	Formula
5605 C	
PN-SB	55.53
PN-066	39.72
PN-230	4.75

Starting Point	Formula
5615 C	
PN-TW	47.78
PN-066	29.30
PN-SB	18.31
PN-230	4.61

Starting Point	Formula
5625 C	
PN-TW	67.00
PN-SB	15.68
PN-064	14.59
PN-230	2.73

Starting Point	Formula
5635 C	
PN-TW	87.12
PN-SB	8.06
PN-064	3.32
PN-325	1.50

Starting Point	Formula
5645 C	
PN-TW	91.69
PN-SB	4.68
PN-064	2.83
PN-230	0.80

Starting Point	Formula
5655 C	
PN-TW	93.76
PN-SB	3.50
PN-064	2.18
PN-230	0.56

Starting Point	Formula
5665 C	
PN-TW	96.55
PN-SB	1.97
PN-064	1.16
PN-230	0.32

Starting Point	Formula
567 C	
PN-SB	41.48
PN-325	31.99
PN-TW	19.68
PN-066	6.85

Starting Point	Formula
568 C	
PN-325	53.96
PN-TW	33.28
PN-114	10.05
PN-127	2.71

Starting Point	Formula
569 C	
PN-TW	47.01
PN-325	45.84
PN-121	4.88
PN-165	2.27

Starting Point	Formula
570 C	
PN-TW	90.20
PN-325	7.92
PN-121	1.22
PN-165	0.66

Starting Point	Formula
571 C	
PN-TW	95.28
PN-325	3.81
PN-164	0.91

Starting Point	Formula
572 C	
PN-TW	96.26
PN-325	2.59
PN-165	0.79
PN-064	0.36

PolyDyne PN

Starting Point	Formula
573 C	
PN-TW	97.86
PN-325	1.70
PN-165	0.44

Starting Point	Formula
574 C	
PN-064	61.80
PN-SB	33.13
PN-230	5.07

Starting Point	Formula
575 C	
PN-064	77.80
PN-SB	15.43
PN-230	6.77

Starting Point	Formula
576 C	
PN-066	91.18
PN-230	8.82

Starting Point	Formula
577 C	
PN-TW	75.63
PN-064	22.06
PN-230	1.84
PN-127	0.47

Starting Point	Formula
578 C	
PN-TW	85.32
PN-064	12.31
PN-SB	1.33
PN-230	1.04

Starting Point	Formula
579 C	
PN-TW	84.62
PN-066	14.17
PN-230	1.21

Starting Point	Formula
580 C	
PN-TW	90.74
PN-066	8.51
PN-230	0.75

Starting Point	Formula
5743 C	
PN-064	57.35
PN-SB	38.38
PN-230	4.27

Starting Point	Formula
5753 C	
PN-066	77.90
PN-230	11.37
PN-121	10.73

Starting Point	Formula
5763 C	
PN-066	72.39
PN-TW	19.04
PN-230	6.07
PN-127	2.50

Starting Point	Formula
5773 C	
PN-TW	64.88
PN-064	24.61
PN-SB	9.47
PN-230	1.04

Starting Point	Formula
5783 C	
PN-TW	82.43
PN-064	11.75
PN-SB	5.21
PN-230	0.61

Starting Point	Formula
5793 C	
PN-TW	90.53
PN-064	5.69
PN-SB	3.30
PN-325	0.48

Starting Point	Formula
5803 C	
PN-TW	94.64
PN-064	3.32
PN-SB	2.04

Starting Point	Formula
5747 C	
PN-064	54.10
PN-SB	38.57
PN-325	7.33

PolyDyne PN

Starting Point	Formula
5757 C	
PN-066	81.56
PN-114	9.40
PN-230	9.04

Starting Point	Formula
5767 C	
PN-066	55.17
PN-TW	33.45
PN-SB	7.18
PN-325	4.20

Starting Point	Formula
5777 C	
PN-TW	61.98
PN-066	31.41
PN-SB	4.26
PN-325	2.35

Starting Point	Formula
5787 C	
PN-TW	81.47
PN-066	14.90
PN-SB	2.43
PN-325	1.20

Starting Point	Formula
5797 C	
PN-TW	89.61
PN-066	8.18
PN-SB	1.51
PN-325	0.70

Starting Point	Formula
5807 C	
PN-TW	93.75
PN-066	4.76
PN-SB	1.08
PN-325	0.41

Starting Point	Formula
581 C	
PN-064	68.70
PN-SB	28.69
PN-325	2.61

Starting Point	Formula
582 C	
PN-064	87.48
PN-SB	10.48
PN-230	2.04

Starting Point	Formula
583 C	
PN-064	64.05
PN-066	33.07
PN-230	2.88

Starting Point	Formula
584 C	
PN-064	46.60
PN-TW	45.91
PN-066	6.38
PN-230	1.11

Starting Point	Formula
585 C	
PN-TW	68.36
PN-064	30.96
PN-230	0.68

Starting Point	Formula
586 C	
PN-TW	79.16
PN-064	20.32
PN-230	0.52

Starting Point	Formula
587 C	
PN-TW	85.57
PN-064	14.07
PN-230	0.36

Starting Point	Formula
5815 C	
PN-064	59.18
PN-SB	38.53
PN-230	2.29

Starting Point	Formula
5825 C	
PN-066	86.54
PN-SB	9.73
PN-230	3.73

Starting Point	Formula
5835 C	
PN-066	58.05
PN-TW	35.37
PN-SB	4.38
PN-230	2.20

PolyDyne PN

Starting Point 5845 C PN-TW 57.17 PN-066 38.36 PN-SB 3.00 PN-230 1.47	Formula	Starting Point 5855 C PN-TW 83.54 PN-064 12.90 PN-SB 3.56	Formula	Starting Point 5865 C PN-TW 89.73 PN-064 7.90 PN-SB 2.37	Formula	Starting Point 5875 C PN-TW 92.82 PN-064 5.48 PN-SB 1.70	Formula
Starting Point 600 C PN-TW 90.54 PN-064 9.46	Formula	Starting Point 601 C PN-TW 87.00 PN-064 13.00	Formula	Starting Point 602 C PN-TW 81.30 PN-064 18.70	Formula	Starting Point 603 C PN-TW 61.31 PN-064 38.27 PN-325 0.42	Formula
Starting Point 604 C PN-064 63.48 PN-TW 35.97 PN-325 0.55	Formula	Starting Point 605 C PN-064 97.20 PN-114 1.66 PN-325 1.14	Formula	Starting Point 606 C PN-064 95.36 PN-114 3.06 PN-325 1.58	Formula	Starting Point 607 C PN-TW 92.72 PN-066 4.61 PN-064 2.67	Formula
Starting Point 608 C PN-TW 90.00 PN-066 5.53 PN-064 4.47	Formula	Starting Point 609 C PN-TW 83.85 PN-064 8.20 PN-066 7.42 PN-325 0.53	Formula	Starting Point 610 C PN-TW 66.03 PN-066 16.71 PN-064 16.33 PN-325 0.93	Formula	Starting Point 611 C PN-064 54.56 PN-TW 43.31 PN-SB 1.65 PN-325 0.48	Formula

PolyDyne PN

Starting Point	Formula
612 C	
PN-064	52.00
PN-066	46.24
PN-230	1.76

Starting Point	Formula
613 C	
PN-064	93.09
PN-SB	6.53
PN-325	0.38

Starting Point	Formula
614 C	
PN-TW	93.20
PN-066	6.00
PN-SB	0.48
PN-325	0.32

Starting Point	Formula
615 C	
PN-TW	90.04
PN-066	8.77
PN-SB	0.73
PN-325	0.46

Starting Point	Formula
616 C	
PN-TW	82.76
PN-066	16.18
PN-230	0.60
PN-SB	0.46

Starting Point	Formula
617 C	
PN-TW	67.70
PN-066	30.38
PN-230	1.31
PN-114	0.61

Starting Point	Formula
618 C	
PN-066	60.00
PN-TW	37.08
PN-230	2.03
PN-SB	0.89

Starting Point	Formula
619 C	
PN-066	94.08
PN-230	4.20
PN-121	1.72

Starting Point	Formula
620 C	
PN-064	77.35
PN-114	16.37
PN-230	6.28

Starting Point	Formula
621 C	
PN-TW	98.18
PN-SB	1.29
PN-325	0.53

Starting Point	Formula
622 C	
PN-TW	96.08
PN-SB	2.27
PN-325	1.21
PN-064	0.44

Starting Point	Formula
623 C	
PN-TW	91.20
PN-SB	4.59
PN-325	2.56
PN-064	1.65

Starting Point	Formula
624 C	
PN-TW	79.82
PN-SB	8.44
PN-325	5.93
PN-066	5.81

Starting Point	Formula
625 C	
PN-TW	60.72
PN-SB	14.54
PN-325	13.09
PN-066	11.65

Starting Point	Formula
626 C	
PN-325	42.45
PN-164	22.30
PN-064	21.83
PN-TW	13.42

Starting Point	Formula
627 C	
PN-SB	58.31
PN-325	30.86
PN-230	10.83

PolyDyne PN

Starting Point 628 C PN-TW 99.12 PN-230 0.88	Formula	Starting Point 629 C PN-TW 97.93 PN-230 1.73 PN-121 0.34	Formula	Starting Point 630 C PN-TW 95.97 PN-230 3.19 PN-SB 0.84	Formula	Starting Point 631 C PN-TW 90.81 PN-230 6.96 PN-SB 1.15 PN-064 1.08	Formula
Starting Point 632 C PN-TW 75.81 PN-230 17.86 PN-066 6.33	Formula	Starting Point 633 C PN-TW 46.43 PN-230 40.96 PN-325 11.64 PN-114 0.97	Formula	Starting Point 634 C PN-230 68.37 PN-TW 21.01 PN-064 10.62	Formula	Starting Point 635 C PN-TW 98.27 PN-230 1.73	Formula
Starting Point 636 C PN-TW 97.00 PN-230 3.00	Formula	Starting Point 637 C PN-TW 94.25 PN-230 5.57 PN-114 0.18	Formula	Starting Point 638 C PN-TW 85.89 PN-230 12.36 PN-325 1.75	Formula	Starting Point 639 C PN-TW 69.45 PN-230 26.65 PN-325 3.90	Formula
Starting Point 640 C PN-TW 58.07 PN-230 38.41 PN-325 3.52	Formula	Starting Point 641 C PN-230 55.56 PN-MX 40.05 PN-TW 4.39	Formula	Starting Point 642 C PN-TW 99.11 PN-230 0.52 PN-127 0.37	Formula	Starting Point 643 C PN-TW 98.76 PN-230 0.75 PN-127 0.49	Formula

PolyDyne PN

Starting Point	Formula
644 C	
PN-TW	93.81
PN-230	3.18
PN-164	3.01

Starting Point	Formula
645 C	
PN-TW	88.25
PN-230	5.89
PN-164	5.40
PN-127	0.46

Starting Point	Formula
646 C	
PN-TW	81.33
PN-230	9.73
PN-164	7.93
PN-127	1.01

Starting Point	Formula
647 C	
PN-TW	54.28
PN-230	26.39
PN-164	14.97
PN-127	4.36

Starting Point	Formula
648 C	
PN-230	58.25
PN-SB	22.54
PN-127	19.21

Starting Point	Formula
649 C	
PN-TW	99.13
PN-230	0.48
PN-127	0.39

Starting Point	Formula
650 C	
PN-TW	98.02
PN-230	0.80
PN-127	0.64
PN-064	0.54

Starting Point	Formula
651 C	
PN-TW	93.90
PN-164	2.99
PN-230	2.75
PN-127	0.36

Starting Point	Formula
652 C	
PN-TW	86.50
PN-164	6.51
PN-230	6.20
PN-127	0.79

Starting Point	Formula
653 C	
PN-TW	57.59
PN-230	23.28
PN-164	14.52
PN-127	4.61

Starting Point	Formula
654 C	
PN-127	75.26
PN-230	15.17
PN-TW	9.57

Starting Point	Formula
655 C	
PN-230	44.52
PN-164	37.89
PN-127	17.59

Starting Point	Formula
656 C	
PN-TW	99.11
PN-230	0.50
PN-127	0.39

Starting Point	Formula
657 C	
PN-TW	98.49
PN-230	0.89
PN-127	0.62

Starting Point	Formula
658 C	
PN-TW	97.03
PN-230	1.79
PN-127	1.18

Starting Point	Formula
659 C	
PN-TW	91.65
PN-230	4.72
PN-127	2.79
PN-064	0.84

PolyDyne PN

Starting Point	Formula
660 C	
PN-TW	70.58
PN-230	16.04
PN-165	10.73
PN-127	2.65

Starting Point	Formula
661 C	
PN-230	63.43
PN-TW	22.21
PN-127	14.36

Starting Point	Formula
662 C	
PN-230	64.51
PN-127	26.31
PN-TW	9.18

Starting Point	Formula
663 C	
PN-TW	99.38
PN-127	0.62

Starting Point	Formula
664 C	
PN-TW	98.80
PN-127	0.66
PN-SB	0.54

Starting Point	Formula
665 C	
PN-TW	97.92
PN-127	1.18
PN-SB	0.90

Starting Point	Formula
666 C	
PN-TW	91.70
PN-SB	6.39
PN-127	1.91

Starting Point	Formula
667 C	
PN-TW	80.59
PN-SB	13.15
PN-127	6.26

Starting Point	Formula
668 C	
PN-TW	72.18
PN-SB	13.81
PN-127	10.90
PN-121	2.33
PN-230	0.78

Starting Point	Formula
669 C	
PN-TW	42.80
PN-SB	23.99
PN-127	22.21
PN-165	11.00

Starting Point	Formula
670 C	
PN-TW	98.06
PN-165	1.58
PN-SB	0.36

Starting Point	Formula
671 C	
PN-TW	96.14
PN-165	3.30
PN-SB	0.56

Starting Point	Formula
672 C	
PN-TW	92.58
PN-165	6.56
PN-SB	0.86

Starting Point	Formula
673 C	
PN-TW	82.40
PN-165	15.51
PN-SB	2.09

Starting Point	Formula
674 C	
PN-TW	71.21
PN-165	23.05
PN-164	3.65
PN-SB	2.09

Starting Point	Formula
675 C	
PN-165	55.67
PN-TW	32.24
PN-164	7.69
PN-SB	4.40

PolyDyne PN

Starting Point	Formula
676 C	
PN-165	68.11
PN-164	18.27
PN-SB	10.45
PN-TW	3.17

Starting Point	Formula
677 C	
PN-TW	97.61
PN-165	1.51
PN-SB	0.88

Starting Point	Formula
678 C	
PN-TW	96.81
PN-165	2.02
PN-SB	1.17

Starting Point	Formula
679 C	
PN-TW	94.93
PN-165	3.25
PN-SB	1.82

Starting Point	Formula
680 C	
PN-TW	88.78
PN-165	7.69
PN-SB	3.53

Starting Point	Formula
681 C	
PN-TW	77.40
PN-165	15.66
PN-SB	6.42
PN-121	0.52

Starting Point	Formula
682 C	
PN-TW	50.02
PN-165	36.91
PN-SB	11.85
PN-121	1.22

Starting Point	Formula
683 C	
PN-165	72.35
PN-SB	25.06
PN-121	2.59

Starting Point	Formula
684 C	
PN-TW	96.76
PN-165	1.45
PN-SB	1.13
PN-121	0.66

Starting Point	Formula
685 C	
PN-TW	95.76
PN-165	1.90
PN-SB	1.48
PN-121	0.86

Starting Point	Formula
686 C	
PN-TW	94.07
PN-165	2.66
PN-SB	2.07
PN-121	1.20

Starting Point	Formula
687 C	
PN-TW	84.60
PN-165	8.32
PN-SB	4.36
PN-121	2.72

Starting Point	Formula
688 C	
PN-TW	81.68
PN-121	8.99
PN-165	5.43
PN-127	2.86
PN-SB	1.04

Starting Point	Formula
689 C	
PN-TW	46.46
PN-165	35.42
PN-SB	13.31
PN-121	4.81

Starting Point	Formula
690 C	
PN-165	46.43
PN-TW	24.00
PN-SB	22.13
PN-121	7.44

Starting Point	Formula
691 C	
PN-TW	97.61
PN-121	1.02
PN-SB	0.87
PN-165	0.50

PolyDyne PN

Starting Point	Formula
692 C	
PN-TW	96.36
PN-121	1.71
PN-SB	1.26
PN-165	0.67

Starting Point	Formula
693 C	
PN-TW	91.59
PN-121	4.44
PN-SB	2.94
PN-165	1.03

Starting Point	Formula
694 C	
PN-TW	87.30
PN-121	6.29
PN-SB	4.71
PN-165	1.70

Starting Point	Formula
695 C	
PN-TW	73.74
PN-121	12.85
PN-SB	7.50
PN-165	5.91

Starting Point	Formula
696 C	
PN-TW	45.72
PN-121	27.15
PN-SB	13.57
PN-165	13.56

Starting Point	Formula
697 C	
PN-121	36.20
PN-TW	30.09
PN-SB	21.78
PN-165	11.93

Starting Point	Formula
698 C	
PN-TW	97.55
PN-121	1.63
PN-165	0.82

Starting Point	Formula
699 C	
PN-TW	96.18
PN-121	2.35
PN-165	1.47

Starting Point	Formula
700 C	
PN-TW	93.05
PN-121	4.47
PN-165	2.48

Starting Point	Formula
701 C	
PN-TW	87.98
PN-121	7.23
PN-165	4.79

Starting Point	Formula
702 C	
PN-TW	70.26
PN-121	17.57
PN-165	11.06
PN-325	1.11

Starting Point	Formula
703 C	
PN-TW	40.49
PN-121	32.94
PN-165	24.26
PN-325	2.31

Starting Point	Formula
704 C	
PN-121	57.40
PN-165	28.86
PN-TW	8.58
PN-325	5.16

Starting Point	Formula
705 C	
PN-TW	98.81
PN-165	0.63
PN-121	0.56

Starting Point	Formula
706 C	
PN-TW	96.67
PN-121	2.15
PN-165	1.18

Starting Point	Formula
707 C	
PN-TW	94.84
PN-121	3.11
PN-165	2.05

PolyDyne PN

Starting Point	Formula
708 C	
PN-TW 88.34	
PN-121 7.09	
PN-165 4.57	

Starting Point	Formula
709 C	
PN-TW 78.11	
PN-121 12.38	
PN-165 9.51	

Starting Point	Formula
710 C	
PN-TW 54.99	
PN-121 28.04	
PN-165 16.97	

Starting Point	Formula
711 C	
PN-121 50.65	
PN-TW 24.99	
PN-165 23.90	
PN-325 0.46	

Starting Point	Formula
712 C	
PN-TW 92.06	
PN-064 4.72	
PN-114 3.22	

Starting Point	Formula
713 C	
PN-TW 89.36	
PN-064 5.59	
PN-114 5.05	

Starting Point	Formula
714 C	
PN-TW 80.72	
PN-064 10.91	
PN-114 7.85	
PN-SB 0.52	

Starting Point	Formula
715 C	
PN-TW 51.39	
PN-064 30.99	
PN-114 16.64	
PN-SB 0.98	

Starting Point	Formula
716 C	
PN-064 49.96	
PN-114 26.60	
PN-TW 21.31	
PN-SB 2.13	

Starting Point	Formula
717 C	
PN-114 48.31	
PN-064 47.85	
PN-SB 3.84	

Starting Point	Formula
718 C	
PN-114 57.04	
PN-064 36.65	
PN-SB 6.31	

Starting Point	Formula
719 C	
PN-TW 92.48	
PN-066 4.89	
PN-114 1.82	
PN-SB 0.81	

Starting Point	Formula
720 C	
PN-TW 89.46	
PN-066 6.34	
PN-114 3.03	
PN-SB 1.17	

Starting Point	Formula
721 C	
PN-TW 82.10	
PN-066 10.90	
PN-114 5.14	
PN-SB 1.86	

Starting Point	Formula
722 C	
PN-TW 57.96	
PN-066 28.26	
PN-114 9.66	
PN-SB 4.12	

Starting Point	Formula
723 C	
PN-066 57.51	
PN-114 16.75	
PN-TW 16.44	
PN-SB 9.30	

PolyDyne PN

Starting Point	Formula
724 C	
PN-066	48.62
PN-114	32.37
PN-SB	15.82
PN-TW	3.19

Starting Point	Formula
725 C	
PN-066	40.65
PN-114	32.90
PN-SB	22.06
PN-164	4.39

Starting Point	Formula
726 C	
PN-TW	94.32
PN-066	2.72
PN-114	1.50
PN-SB	1.46

Starting Point	Formula
727 C	
PN-TW	87.29
PN-066	6.08
PN-114	3.36
PN-SB	3.27

Starting Point	Formula
728 C	
PN-TW	76.33
PN-066	12.45
PN-SB	5.70
PN-114	5.52

Starting Point	Formula
729 C	
PN-TW	62.69
PN-066	24.13
PN-114	6.92
PN-SB	6.26

Starting Point	Formula
730 C	
PN-066	48.14
PN-TW	26.47
PN-114	13.17
PN-SB	12.22

Starting Point	Formula
731 C	
PN-066	38.69
PN-114	32.48
PN-SB	28.83

Starting Point	Formula
732 C	
PN-114	57.98
PN-SB	40.43
PN-TW	1.59

Starting Point	Formula
7401 C	
PN-TW	93.71
PN-066	6.29

Starting Point	Formula
7402 C	
PN-TW	84.72
PN-066	15.28

Starting Point	Formula
7403 C	
PN-TW	69.57
PN-066	29.89
PN-230	0.54

Starting Point	Formula
7404 C	
PN-064	64.21
PN-TW	35.21
PN-SB	0.58

Starting Point	Formula
7405 C	
PN-064	72.24
PN-066	27.27
PN-230	0.49

Starting Point	Formula
7406 C	
PN-064	96.20
PN-114	2.28
PN-SB	1.52

Starting Point	Formula
7407 C	
PN-066	61.92
PN-TW	33.83
PN-SB	4.25

PolyDyne PN

Starting Point	Formula
7408 C	
PN-064 96.61	
PN-165 3.39	

Starting Point	Formula
7409 C	
PN-064 94.37	
PN-165 5.63	

Starting Point	Formula
7410 C	
PN-TW 74.04	
PN-064 13.95	
PN-114 12.01	

Starting Point	Formula
7411 C	
PN-066 63.18	
PN-TW 35.75	
PN-127 1.07	

Starting Point	Formula
7412 C	
PN-066 63.01	
PN-114 17.02	
PN-TW 15.00	
PN-SB 4.97	

Starting Point	Formula
7413 C	
PN-064 82.99	
PN-165 15.04	
PN-SB 1.97	

Starting Point	Formula
7414 C	
PN-064 61.64	
PN-114 30.39	
PN-SB 7.97	

Starting Point	Formula
7415 C	
PN-TW 90.25	
PN-064 5.99	
PN-164 3.08	
PN-SB 0.68	

Starting Point	Formula
7416 C	
PN-064 51.79	
PN-165 26.06	
PN-TW 22.15	

Starting Point	Formula
7417 C	
PN-064 63.31	
PN-165 32.69	
PN-121 4.00	

Starting Point	Formula
7418 C	
PN-121 51.24	
PN-TW 47.26	
PN-230 1.50	

Starting Point	Formula
7419 C	
PN-121 54.69	
PN-TW 41.83	
PN-230 3.48	

Starting Point	Formula
7420 C	
PN-165 52.57	
PN-121 42.68	
PN-325 4.75	

Starting Point	Formula
7421 C	
PN-121 64.23	
PN-164 26.83	
PN-230 8.94	

Starting Point	Formula
7422 C	
PN-TW 98.37	
PN-165 1.05	
PN-121 0.58	

Starting Point	Formula
7423 C	
PN-TW 75.43	
PN-165 15.44	
PN-121 9.13	

PolyDyne PN

Starting Point	Formula
7424 C	
PN-TW 54.21	
PN-165 34.57	
PN-121 11.22	

Starting Point	Formula
7425 C	
PN-165 44.17	
PN-TW 34.99	
PN-121 19.82	
PN-325 1.02	

Starting Point	Formula
7426 C	
PN-165 50.21	
PN-066 46.24	
PN-SB 3.55	

Starting Point	Formula
7427 C	
PN-121 56.42	
PN-164 23.77	
PN-TW 11.95	
PN-SB 7.86	

Starting Point	Formula
7428 C	
PN-165 44.09	
PN-066 30.03	
PN-SB 18.34	
PN-TW 7.54	

Starting Point	Formula
7429 C	
PN-TW 97.23	
PN-164 2.34	
PN-SB 0.43	

Starting Point	Formula
7430 C	
PN-TW 92.31	
PN-165 3.45	
PN-164 2.53	
PN-SB 1.71	

Starting Point	Formula
7431 C	
PN-TW 86.21	
PN-165 6.20	
PN-164 5.20	
PN-SB 2.39	

Starting Point	Formula
7432 C	
PN-TW 56.22	
PN-165 28.94	
PN-066 10.77	
PN-SB 4.07	

Starting Point	Formula
7433 C	
PN-165 44.90	
PN-TW 38.91	
PN-121 11.01	
PN-SB 5.18	

Starting Point	Formula
7434 C	
PN-165 61.41	
PN-066 34.82	
PN-325 3.77	

Starting Point	Formula
7435 C	
PN-165 58.98	
PN-066 28.00	
PN-SB 13.02	

Starting Point	Formula
7436 C	
PN-TW 98.91	
PN-165 0.56	
PN-127 0.53	

Starting Point	Formula
7437 C	
PN-TW 93.35	
PN-165 4.17	
PN-164 1.58	
PN-230 0.90	

Starting Point	Formula
7438 C	
PN-TW 91.17	
PN-165 7.02	
PN-127 1.81	

Starting Point	Formula
7439 C	
PN-TW 90.13	
PN-165 5.04	
PN-SB 2.60	
PN-127 2.23	

PolyDyne PN

Starting Point	Formula
7440 C	
PN-TW 81.40	
PN-066 11.79	
PN-127 6.81	

Starting Point	Formula
7441 C	
PN-TW 88.53	
PN-127 11.47	

Starting Point	Formula
7442 C	
PN-TW 81.40	
PN-127 18.60	

Starting Point	Formula
7443 C	
PN-TW 99.17	
PN-127 0.54	
PN-230 0.29	

Starting Point	Formula
7444 C	
PN-TW 94.25	
PN-165 4.18	
PN-230 1.57	

Starting Point	Formula
7445 C	
PN-TW 92.35	
PN-164 4.27	
PN-230 2.34	
PN-127 1.04	

Starting Point	Formula
7446 C	
PN-TW 92.16	
PN-127 4.98	
PN-230 1.68	
PN-064 1.18	

Starting Point	Formula
7447 C	
PN-TW 55.57	
PN-127 20.84	
PN-064 19.89	
PN-325 3.70	

Starting Point	Formula
7448 C	
PN-TW 36.46	
PN-066 28.63	
PN-SB 19.26	
PN-127 15.65	

Starting Point	Formula
7449 C	
PN-121 46.48	
PN-164 33.54	
PN-230 19.98	

Starting Point	Formula
7450 C	
PN-TW 96.64	
PN-064 1.27	
PN-127 1.08	
PN-230 1.01	

Starting Point	Formula
7451 C	
PN-TW 94.34	
PN-230 3.43	
PN-127 2.23	

Starting Point	Formula
7452 C	
PN-TW 92.05	
PN-127 4.08	
PN-230 3.87	

Starting Point	Formula
7453 C	
PN-TW 92.59	
PN-230 4.31	
PN-127 2.48	
PN-064 0.62	

Starting Point	Formula
7454 C	
PN-TW 85.44	
PN-230 7.81	
PN-164 5.66	
PN-127 1.09	

Starting Point	Formula
7455 C	
PN-TW 73.29	
PN-230 14.04	
PN-127 11.15	
PN-064 1.52	

PolyDyne PN

Starting Point	Formula
7456 C	
PN-TW 84.78	
PN-127 6.17	
PN-230 4.75	
PN-064 4.30	

Starting Point	Formula
7457 C	
PN-TW 99.21	
PN-230 0.79	

Starting Point	Formula
7458 C	
PN-TW 92.73	
PN-230 4.56	
PN-164 1.88	
PN-064 0.83	

Starting Point	Formula
7459 C	
PN-TW 82.71	
PN-230 11.35	
PN-164 3.56	
PN-064 2.38	

Starting Point	Formula
7460 C	
PN-TW 62.94	
PN-230 34.24	
PN-325 2.82	

Starting Point	Formula
7461 C	
PN-TW 69.33	
PN-230 23.87	
PN-165 5.09	
PN-064 1.71	

Starting Point	Formula
7462 C	
PN-TW 51.79	
PN-230 27.51	
PN-165 12.21	
PN-164 8.49	

Starting Point	Formula
7463 C	
PN-164 40.43	
PN-230 34.27	
PN-TW 25.30	

Starting Point	Formula
7464 C	
PN-TW 96.93	
PN-230 1.52	
PN-064 1.55	

Starting Point	Formula
7465 C	
PN-TW 87.84	
PN-064 4.91	
PN-230 4.62	
PN-325 2.63	

Starting Point	Formula
7466 C	
PN-TW 72.44	
PN-325 15.70	
PN-230 11.86	

Starting Point	Formula
7467 C	
PN-TW 67.29	
PN-325 18.15	
PN-230 14.56	

Starting Point	Formula
7468 C	
PN-TW 61.58	
PN-230 30.85	
PN-SB 7.57	

Starting Point	Formula
7469 C	
PN-230 58.66	
PN-TW 34.86	
PN-114 6.48	

Starting Point	Formula
7470 C	
PN-TW 52.19	
PN-230 30.69	
PN-SB 17.12	

Starting Point	Formula
7471 C	
PN-TW 96.53	
PN-325 2.56	
PN-230 0.91	

PolyDyne PN

Starting Point	Formula
7472 C	
PN-TW	86.29
PN-066	8.08
PN-230	5.63

Starting Point	Formula
7473 C	
PN-TW	70.65
PN-064	16.09
PN-230	11.51
PN-SB	1.75

Starting Point	Formula
7474 C	
PN-TW	59.34
PN-230	20.91
PN-325	14.87
PN-114	4.88

Starting Point	Formula
7475 C	
PN-TW	69.74
PN-066	11.90
PN-SB	9.66
PN-230	8.70

Starting Point	Formula
7476 C	
PN-230	31.78
PN-TW	24.97
PN-066	24.79
PN-SB	18.46

Starting Point	Formula
7477 C	
PN-TW	44.52
PN-SB	32.26
PN-230	23.22

Starting Point	Formula
7478 C	
PN-TW	96.20
PN-325	2.02
PN-066	1.78

Starting Point	Formula
7479 C	
PN-TW	69.99
PN-064	17.32
PN-325	12.69

Starting Point	Formula
7480 C	
PN-TW	60.50
PN-325	21.77
PN-064	17.73

Starting Point	Formula
7481 C	
PN-064	39.37
PN-TW	30.82
PN-325	29.81

Starting Point	Formula
7482 C	
PN-TW	40.99
PN-064	31.68
PN-325	23.05
PN-230	4.28

Starting Point	Formula
7483 C	
PN-066	42.84
PN-325	26.19
PN-SB	19.44
PN-TW	11.53

Starting Point	Formula
7484 C	
PN-325	39.89
PN-SB	20.51
PN-066	20.37
PN-TW	19.23

Starting Point	Formula
7485 C	
PN-TW	97.14
PN-066	2.86

Starting Point	Formula
7486 C	
PN-TW	88.73
PN-064	10.03
PN-325	1.24

Starting Point	Formula
7487 C	
PN-TW	61.38
PN-064	33.17
PN-325	5.45

PolyDyne PN

Starting Point	Formula
7488 C	
PN-064 61.81	
PN-TW 27.96	
PN-325 10.23	

Starting Point	Formula
7489 C	
PN-064 44.57	
PN-TW 31.86	
PN-066 17.06	
PN-230 6.51	

Starting Point	Formula
7490 C	
PN-064 70.50	
PN-TW 21.47	
PN-230 6.32	
PN-127 1.71	

Starting Point	Formula
7491 C	
PN-066 89.52	
PN-230 7.21	
PN-SB 3.27	

Starting Point	Formula
7492 C	
PN-TW 79.39	
PN-064 18.32	
PN-SB 1.46	
PN-230 0.83	

Starting Point	Formula
7493 C	
PN-TW 83.57	
PN-064 12.34	
PN-SB 2.97	
PN-325 1.12	

Starting Point	Formula
7494 C	
PN-TW 76.29	
PN-066 16.15	
PN-SB 4.63	
PN-325 2.93	

Starting Point	Formula
7495 C	
PN-066 93.92	
PN-230 6.08	

Starting Point	Formula
7496 C	
PN-064 77.97	
PN-SB 13.93	
PN-325 8.10	

Starting Point	Formula
7497 C	
PN-TW 38.57	
PN-064 36.06	
PN-SB 25.37	

Starting Point	Formula
7498 C	
PN-064 90.09	
PN-SB 6.02	
PN-230 3.89	

Starting Point	Formula
7499 C	
PN-TW 96.44	
PN-064 3.56	

Starting Point	Formula
7500 C	
PN-TW 92.93	
PN-066 5.99	
PN-164 0.58	
PN-325 0.50	

Starting Point	Formula
7501 C	
PN-TW 89.99	
PN-066 8.31	
PN-SB 1.70	

Starting Point	Formula
7502 C	
PN-TW 84.82	
PN-064 10.56	
PN-SB 3.06	
PN-114 1.56	

Starting Point	Formula
7503 C	
PN-TW 55.80	
PN-066 40.88	
PN-230 1.69	
PN-127 1.63	

PolyDyne PN

Starting Point	Formula
7504 C	
PN-066 52.96	
PN-TW 33.93	
PN-SB 10.44	
PN-127 2.67	

Starting Point	Formula
7505 C	
PN-066 45.33	
PN-TW 21.87	
PN-SB 21.02	
PN-114 11.78	

Starting Point	Formula
7506 C	
PN-TW 94.62	
PN-064 4.61	
PN-164 0.77	

Starting Point	Formula
7507 C	
PN-TW 88.54	
PN-066 9.89	
PN-114 1.57	

Starting Point	Formula
7508 C	
PN-TW 80.42	
PN-066 15.38	
PN-114 3.56	
PN-230 0.64	

Starting Point	Formula
7509 C	
PN-TW 65.04	
PN-066 28.46	
PN-114 5.54	
PN-230 0.96	

Starting Point	Formula
7510 C	
PN-066 62.38	
PN-TW 28.36	
PN-SB 4.87	
PN-114 4.39	

Starting Point	Formula
7511 C	
PN-064 70.16	
PN-114 20.17	
PN-SB 9.67	

Starting Point	Formula
7512 C	
PN-064 51.03	
PN-114 44.85	
PN-230 4.12	

Starting Point	Formula
7513 C	
PN-TW 94.73	
PN-114 3.43	
PN-121 1.29	
PN-230 0.55	

Starting Point	Formula
7514 C	
PN-TW 88.42	
PN-114 5.58	
PN-066 3.30	
PN-SB 2.70	

Starting Point	Formula
7515 C	
PN-TW 75.92	
PN-114 10.20	
PN-066 9.26	
PN-SB 4.62	

Starting Point	Formula
7516 C	
PN-114 38.21	
PN-064 30.34	
PN-TW 18.60	
PN-SB 12.85	

Starting Point	Formula
7517 C	
PN-066 40.46	
PN-114 38.96	
PN-SB 20.58	

Starting Point	Formula
7518 C	
PN-TW 33.44	
PN-SB 28.47	
PN-066 22.48	
PN-121 15.61	

Starting Point	Formula
7519 C	
PN-066 40.91	
PN-SB 35.45	
PN-TW 16.54	
PN-164 7.10	

PolyDyne PN

Starting Point	Formula
7520 C	
PN-TW 95.86	
PN-114 2.34	
PN-121 1.42	
PN-230 0.38	

Starting Point	Formula
7521 C	
PN-TW 91.24	
PN-SB 3.89	
PN-114 3.59	
PN-164 1.28	

Starting Point	Formula
7522 C	
PN-TW 47.28	
PN-064 32.60	
PN-165 15.37	
PN-SB 4.75	

Starting Point	Formula
7523 C	
PN-TW 62.52	
PN-121 19.60	
PN-SB 9.03	
PN-114 8.85	

Starting Point	Formula
7524 C	
PN-TW 52.44	
PN-121 21.32	
PN-114 16.70	
PN-SB 9.54	

Starting Point	Formula
7525 C	
PN-066 62.50	
PN-TW 30.84	
PN-127 5.77	
PN-SB 0.89	

Starting Point	Formula
7526 C	
PN-114 78.62	
PN-SB 16.52	
PN-TW 4.86	

Starting Point	Formula
7527 C	
PN-TW 98.05	
PN-SB 1.23	
PN-066 0.72	

Starting Point	Formula
7528 C	
PN-TW 96.96	
PN-SB 2.40	
PN-114 0.64	

Starting Point	Formula
7529 C	
PN-TW 92.58	
PN-SB 4.60	
PN-066 1.75	
PN-114 1.07	

Starting Point	Formula
7530 C	
PN-TW 81.68	
PN-SB 9.12	
PN-066 6.79	
PN-114 2.41	

Starting Point	Formula
7531 C	
PN-TW 53.13	
PN-066 21.29	
PN-SB 19.64	
PN-114 5.94	

Starting Point	Formula
7532 C	
PN-SB 33.26	
PN-066 32.47	
PN-TW 23.92	
PN-114 10.35	

Starting Point	Formula
7533 C	
PN-SB 45.89	
PN-066 39.96	
PN-TW 7.12	
PN-114 7.03	

Starting Point	Formula
7534 C	
PN-TW 96.34	
PN-SB 2.06	
PN-066 1.60	

Starting Point	Formula
7535 C	
PN-TW 90.95	
PN-SB 4.72	
PN-064 4.33	

PolyDyne PN

Starting Point	Formula
7536 C	
PN-TW 79.17	
PN-066 12.83	
PN-SB 8.00	

Starting Point	Formula
7537 C	
PN-TW 91.24	
PN-SB 5.46	
PN-066 2.62	
PN-325 0.68	

Starting Point	Formula
7538 C	
PN-TW 87.62	
PN-SB 7.77	
PN-066 3.61	
PN-325 1.00	

Starting Point	Formula
7539 C	
PN-TW 86.85	
PN-SB 10.62	
PN-064 2.09	
PN-325 0.44	

Starting Point	Formula
7540 C	
PN-TW 69.19	
PN-SB 30.17	
PN-127 0.64	

Starting Point	Formula
7541 C	
PN-TW 99.60	
PN-230 0.40	

Starting Point	Formula
7542 C	
PN-TW 93.62	
PN-164 2.20	
PN-064 2.18	
PN-230 2.00	

Starting Point	Formula
7543 C	
PN-TW 92.61	
PN-SB 4.35	
PN-164 1.60	
PN-230 1.44	

Starting Point	Formula
7544 C	
PN-TW 86.26	
PN-SB 8.44	
PN-164 2.75	
PN-230 2.55	

Starting Point	Formula
7545 C	
PN-TW 63.39	
PN-SB 20.50	
PN-164 8.43	
PN-230 7.68	

Starting Point	Formula
7546 C	
PN-TW 45.03	
PN-SB 26.53	
PN-164 16.98	
PN-230 11.46	

Starting Point	Formula
7547 C	
PN-164 42.57	
PN-066 35.21	
PN-230 22.22	

Starting Point	Formula
Black 2C	
PN-SB 60.47	
PN-064 39.53	

Starting Point	Formula
Black 3C	
PN-SB 67.90	
PN-066 11.85	
PN-325 11.50	
PN-TW 8.75	

Starting Point	Formula
Black 4C	
PN-SB 59.82	
PN-064 26.33	
PN-114 13.85	

Starting Point	Formula
Black 5C	
PN-SB 47.85	
PN-066 26.02	
PN-165 22.37	
PN-TW 3.76	

PolyDyne PN

Starting Point	Formula
Black 6C	
PN-SB 58.84	
PN-127 29.87	
PN-121 11.29	

Starting Point	Formula
Black 7C	
PN-SB 40.46	
PN-TW 38.69	
PN-066 20.85	